



Spectra® IV and Spectra® IV SE Series Dome Drives



C3412M (9/06)

Contents

| | |
|--|----|
| Welcome | 6 |
| Installation | 7 |
| Switch Settings | 7 |
| SW1 – Receiver Address | 7 |
| SW2 Switches 1-3 – Special System Settings | 7 |
| SW2 Switches 4-5 – Serial Port Settings | 8 |
| SW2 Switches 6-8 – Baud Settings | 8 |
| Dome Drive Installation | 9 |
| Getting Started | 19 |
| How to Operate Your Dome System | 20 |
| Quick Programming Guide | 21 |
| Accessing Main Menu (Preset 95) | 21 |
| CM6700/CM6800 | 21 |
| KBD200A/KBD300A (Direct Mode Only) | 21 |
| CM9500 | 22 |
| CM9740/CM9760/CM9770/CM9780 | 22 |
| KBD4000/KBD4002 | 22 |
| MPT9500 | 22 |
| NET300/NET350/NET4001A | 23 |
| WS5050 | 23 |
| VCD5000 | 23 |
| 16X LowLight Color Menu Tree | 24 |
| 22X EXview LowLight Black-White Menu Tree | 26 |
| 22X EXview LowLight Color Menu Tree | 28 |
| 23X LowLight Day/Night Menu Tree | 30 |
| 35X LowLight Day/Night Menu Tree | 32 |
| Language | 34 |
| System Information | 35 |
| Display Setup | 36 |
| Label Positions | 37 |

| | |
|---------------------------------------|----|
| Dome Settings | 38 |
| Camera | 38 |
| Type of Lighting | 38 |
| Auto Focus | 38 |
| Zoom Limit | 39 |
| Zoom Speed | 40 |
| Low Light Limit | 40 |
| IR Cut Filter | 41 |
| Advanced Camera Settings | 42 |
| Shutter Speed | 42 |
| AGC Limit | 42 |
| Auto Iris | 43 |
| Auto Sharpness | 44 |
| Auto White Balance | 44 |
| Backlight Compensation (BLC) | 45 |
| Video Level | 46 |
| Wide Dynamic Range | 46 |
| Electronic Image Stabilization | 47 |
| | 47 |
| Motion Settings | 48 |
| Auto Flip | 48 |
| Proportional Pan | 48 |
| Park Time | 49 |
| Scan Speed | 50 |
| Preset Freeze Frame | 50 |
| Limit Stops | 51 |
| Azimuth Zero | 52 |
| Power Up | 53 |
| Power Up Action | 53 |
| Line Sync | 54 |
| Presets | 55 |
| Enable Motion Detection | 58 |
| Edit Detection Areas | 58 |
| Activate Aux Command | 60 |
| Aux Time | 60 |
| Edit Schedule | 60 |
| Patterns | 61 |
| Zones | 62 |
| Window Blanking | 63 |
| Edit Schedule | 64 |
| Reverse | 64 |
| Clear Window | 64 |
| Blank All Above/Blank All Below | 65 |
| Alarms | 66 |

| | |
|--|----|
| Aux | 69 |
| Edit Schedule | 69 |
| Title Text | 70 |
| Alert | 71 |
| Repeat | 71 |
| Ack Action | 72 |
| Activate Aux | 72 |
| Current Reading | 72 |
| Reset Alert | 72 |
| Clear | 73 |
| Password | 74 |
| Clock | 75 |
| Event | 78 |
| Event Type | 78 |
| Event Label | 78 |
| Edit Event Label | 79 |
| Edit Event | 80 |
| Clear Event | 81 |
| List Event | 81 |
| Holiday | 81 |
| Edit Holiday | 82 |
| Clear Holiday | 83 |
| List Holidays | 83 |
| Scheduled Events | 84 |
| Reset, Cycle Power, Reboot | 85 |
| Reset Camera | 85 |
| Cycle Camera Power | 85 |
| Reboot System | 85 |
| Software/Language File Upload | 86 |
| Suggested Preventative Maintenance | 87 |
| Specifications | 88 |
| 16X Models | 88 |
| 22X Models (Monochrome) | 89 |
| 22X Models (Color) | 90 |
| 23X Models | 91 |
| 35X Models | 93 |

Welcome

Thank you for purchasing Pelco's premier integrated dome system, Spectra® IV/Spectra® IV SE. Your new system features a high resolution camera/optics package with programmable dome drive software.

This manual is designed primarily to be a reference tool for the operation and programming of your system. Inside you will find information about features and commands, as well as a detailed menu tree and a quick start guide. The *Installation* section provides information required to set up and install the dome drive. Please thoroughly familiarize yourself with the information in this manual before installing and using your system.

Installation

NOTE: This manual contains installation instructions only for the Spectra IV/Spectra IV SE dome drive. For complete installation instructions for a Spectra IV/Spectra IV SE dome system, refer to the installation manual shipped with the back box.

SWITCH SETTINGS

Before installing the dome drive, configure the receiver address, termination, and baud setting. The DIP switches used to configure these settings are located on the base of the dome drive.

Figure 1 shows the default settings for the DIP switches. Switch SW1-1 (SW1, switch 1) is set to the ON position. All other switches are set to the OFF position.

Refer to the following sections to set the address, termination, and baud settings for the dome drive.

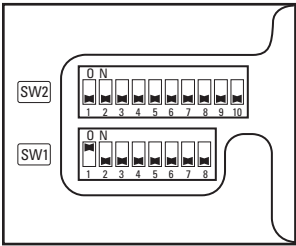


Figure 1. Default Switch Settings

SW1 – RECEIVER ADDRESS

Set the SW1 switches for the address of the dome drive. The following information is required to set the dome drive address:

| | |
|----------------|--|
| P-Type Control | Default address is 2. Refer to Table A for address settings that use P-type control. Maximum number of receivers is 32. |
| D-Type Control | Default address is 1. Refer to Table B for address settings that use D-type control. Maximum number of receivers is 254. |

SW2 SWITCHES 1-3 – SPECIAL SYSTEM SETTINGS

AD-32 Preset System

SW2-1 should be set to the ON position if an AD-32 controller and Pelco's TXB-AD translator board are used to control the dome system.

CM9502 Setting

If a CM9502 matrix system is used with the dome drive, set SW2-2 to the ON position.

Vicon System

The Vicon protocol is not currently available. SW2-3 is reserved for future use.

SW2 SWITCHES 4-5 – SERIAL PORT SETTINGS

2 Wire Setting (RS-485)

SW2-4 should be set to the ON position if a two-wire serial port connection is used.

4 Wire Setting (RS-422)

SW2-5 should be set to the ON position if a four-wire serial port connection is used.

SW2 SWITCHES 6-8 – BAUD SETTINGS

Pelco's D-type controllers are set for 2400 baud. The default setting for the dome drive is 2400 baud. If you are using a Pelco D-type controller, do not reset SW2 switches 1 through 3 or SW2 switches 6 through 8.

P-type controllers can operate at 2400, 4800, and 9600 baud. Set the SW2 switches (6, 7, and 8), located on the base of the dome drive, to the same baud as the P-type controller.

| Switch Number | SW2-6 | SW2-7 | SW2-8 |
|--|-------|-------|-------|
| 2400 Baud (default for D-type control) | Off | Off | Off |
| 4800 Baud (default for P-type control) | On | Off | Off |
| 9600 Baud | Off | On | Off |

SW2 Switch 9 – Coax/UTP Cable

SW2-9 should be set to the OFF position (default) if you are using coax cable. If you are using unshielded twisted pair (UTP) cable, set SW2-9 to the ON position.

SW2 Switch 10 – Termination Setting

When connecting more than one Spectra IV/Spectra IV SE dome system to a single controller, terminate the unit farthest from the controller. Termination is only required for the last dome in the series.

The dome drive is shipped from the factory in the unterminated (OFF) position. To terminate the dome drive, set SW2-10 to the ON position.

NOTE: Dome termination is not required for Coaxitron® control.

DOME DRIVE INSTALLATION

Install the dome drive. Line up the blue and red tabs with the blue and red arrows on the hinged door inside the back box. Push the tabs in. Insert one side and then the other side. Continue pushing on the ends of the tabs until both sides click into place. Refer to Figure 2.

To use your dome system, refer to the *Getting Started* section.

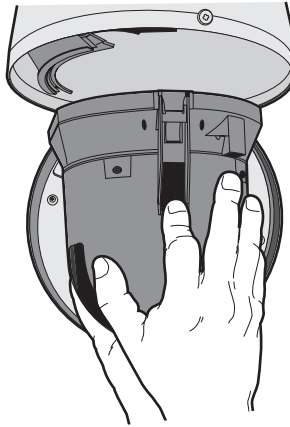


Figure 2. Dome Drive Installation

NOTE: When removing a dome drive that has been in use, caution should be taken to avoid direct contact with the top plate of the unit. This section of the unit will be warm to the touch when first removed from an operating unit.

Table A. Switch Settings for SW1 P-Type Control

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|--------------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 1 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| 2 | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| 3 | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF |
| 4 | ON | ON | OFF | OFF | OFF | OFF | OFF | OFF |
| 5 | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF |
| 6 | ON | OFF | ON | OFF | OFF | OFF | OFF | OFF |
| 7 | OFF | ON | ON | OFF | OFF | OFF | OFF | OFF |
| 8 | ON | ON | ON | OFF | OFF | OFF | OFF | OFF |
| 9 | OFF | OFF | OFF | ON | OFF | OFF | OFF | OFF |
| 10 | ON | OFF | OFF | ON | OFF | OFF | OFF | OFF |
| 11 | OFF | ON | OFF | ON | OFF | OFF | OFF | OFF |
| 12 | ON | ON | OFF | ON | OFF | OFF | OFF | OFF |
| 13 | OFF | OFF | ON | ON | OFF | OFF | OFF | OFF |
| 14 | ON | OFF | ON | ON | OFF | OFF | OFF | OFF |
| 15 | OFF | ON | ON | ON | OFF | OFF | OFF | OFF |
| 16 | ON | ON | ON | ON | OFF | OFF | OFF | OFF |
| 17 | OFF | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| 18 | ON | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| 19 | OFF | ON | OFF | OFF | ON | OFF | OFF | OFF |
| 20 | ON | ON | OFF | OFF | ON | OFF | OFF | OFF |
| 21 | OFF | OFF | ON | OFF | ON | OFF | OFF | OFF |
| 22 | ON | OFF | ON | OFF | ON | OFF | OFF | OFF |
| 23 | OFF | ON | ON | OFF | ON | OFF | OFF | OFF |
| 24 | ON | ON | ON | OFF | ON | OFF | OFF | OFF |
| 25 | OFF | OFF | OFF | ON | ON | OFF | OFF | OFF |
| 26 | ON | OFF | OFF | ON | ON | OFF | OFF | OFF |
| 27 | OFF | ON | OFF | ON | ON | OFF | OFF | OFF |
| 28 | ON | ON | OFF | ON | ON | OFF | OFF | OFF |
| 29 | OFF | OFF | ON | ON | ON | OFF | OFF | OFF |
| 30 | ON | OFF | ON | ON | ON | OFF | OFF | OFF |
| 31 | OFF | ON | ON | ON | ON | OFF | OFF | OFF |
| 32 | ON | ON | ON | ON | ON | OFF | OFF | OFF |

Table B. Switch Settings for SW1 D-Type Control

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|--------------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 1 | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| 2 | OFF | ON | OFF | OFF | OFF | OFF | OFF | OFF |
| 3 | ON | ON | OFF | OFF | OFF | OFF | OFF | OFF |
| 4 | OFF | OFF | ON | OFF | OFF | OFF | OFF | OFF |
| 5 | ON | OFF | ON | OFF | OFF | OFF | OFF | OFF |
| 6 | OFF | ON | ON | OFF | OFF | OFF | OFF | OFF |
| 7 | ON | ON | ON | OFF | OFF | OFF | OFF | OFF |
| 8 | OFF | OFF | OFF | ON | OFF | OFF | OFF | OFF |
| 9 | ON | OFF | OFF | ON | OFF | OFF | OFF | OFF |
| 10 | OFF | ON | OFF | ON | OFF | OFF | OFF | OFF |
| 11 | ON | ON | OFF | ON | OFF | OFF | OFF | OFF |
| 12 | OFF | OFF | ON | ON | OFF | OFF | OFF | OFF |
| 13 | ON | OFF | ON | ON | OFF | OFF | OFF | OFF |
| 14 | OFF | ON | ON | ON | OFF | OFF | OFF | OFF |
| 15 | ON | ON | ON | ON | OFF | OFF | OFF | OFF |
| 16 | OFF | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| 17 | ON | OFF | OFF | OFF | ON | OFF | OFF | OFF |
| 18 | OFF | ON | OFF | OFF | ON | OFF | OFF | OFF |
| 19 | ON | ON | OFF | OFF | ON | OFF | OFF | OFF |
| 20 | OFF | OFF | ON | OFF | ON | OFF | OFF | OFF |
| 21 | ON | OFF | ON | OFF | ON | OFF | OFF | OFF |
| 22 | OFF | ON | ON | OFF | ON | OFF | OFF | OFF |
| 23 | ON | ON | ON | OFF | ON | OFF | OFF | OFF |
| 24 | OFF | OFF | OFF | ON | ON | OFF | OFF | OFF |
| 25 | ON | OFF | OFF | ON | ON | OFF | OFF | OFF |
| 26 | OFF | ON | OFF | ON | ON | OFF | OFF | OFF |
| 27 | ON | ON | OFF | ON | ON | OFF | OFF | OFF |
| 28 | OFF | OFF | ON | ON | ON | OFF | OFF | OFF |
| 29 | ON | OFF | ON | ON | ON | OFF | OFF | OFF |
| 30 | OFF | ON | ON | ON | ON | OFF | OFF | OFF |
| 31 | ON | ON | ON | ON | ON | OFF | OFF | OFF |
| 32 | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF |
| 33 | ON | OFF | OFF | OFF | OFF | ON | OFF | OFF |
| 34 | OFF | ON | OFF | OFF | OFF | ON | OFF | OFF |
| 35 | ON | ON | OFF | OFF | OFF | ON | OFF | OFF |

Table B. Switch Settings for SW1 D-Type Control (Continued)

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|-----------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 36 | OFF | OFF | ON | OFF | OFF | ON | OFF | OFF |
| 37 | ON | OFF | ON | OFF | OFF | ON | OFF | OFF |
| 38 | OFF | ON | ON | OFF | OFF | ON | OFF | OFF |
| 39 | ON | ON | ON | OFF | OFF | ON | OFF | OFF |
| 40 | OFF | OFF | OFF | ON | OFF | ON | OFF | OFF |
| 41 | ON | OFF | OFF | ON | OFF | ON | OFF | OFF |
| 42 | OFF | ON | OFF | ON | OFF | ON | OFF | OFF |
| 43 | ON | ON | OFF | ON | OFF | ON | OFF | OFF |
| 44 | OFF | OFF | ON | ON | OFF | ON | OFF | OFF |
| 45 | ON | OFF | ON | ON | OFF | ON | OFF | OFF |
| 46 | OFF | ON | ON | ON | OFF | ON | OFF | OFF |
| 47 | ON | ON | ON | ON | OFF | ON | OFF | OFF |
| 48 | OFF | OFF | OFF | OFF | ON | ON | OFF | OFF |
| 49 | ON | OFF | OFF | OFF | ON | ON | OFF | OFF |
| 50 | OFF | ON | OFF | OFF | ON | ON | OFF | OFF |
| 51 | ON | ON | OFF | OFF | ON | ON | OFF | OFF |
| 52 | OFF | OFF | ON | OFF | ON | ON | OFF | OFF |
| 53 | ON | OFF | ON | OFF | ON | ON | OFF | OFF |
| 54 | OFF | ON | ON | OFF | ON | ON | OFF | OFF |
| 55 | ON | ON | ON | OFF | ON | ON | OFF | OFF |
| 56 | OFF | OFF | OFF | ON | ON | ON | OFF | OFF |
| 57 | ON | OFF | OFF | ON | ON | ON | OFF | OFF |
| 58 | OFF | ON | OFF | ON | ON | ON | OFF | OFF |
| 59 | ON | ON | OFF | ON | ON | ON | OFF | OFF |
| 60 | OFF | OFF | ON | ON | ON | ON | OFF | OFF |
| 61 | ON | OFF | ON | ON | ON | ON | OFF | OFF |
| 62 | OFF | ON | ON | ON | ON | ON | OFF | OFF |
| 63 | ON | ON | ON | ON | ON | ON | OFF | OFF |
| 64 | OFF | OFF | OFF | OFF | OFF | OFF | ON | OFF |
| 65 | ON | OFF | OFF | OFF | OFF | OFF | ON | OFF |
| 66 | OFF | ON | OFF | OFF | OFF | OFF | ON | OFF |
| 67 | ON | ON | OFF | OFF | OFF | OFF | ON | OFF |
| 68 | OFF | OFF | ON | OFF | OFF | OFF | ON | OFF |
| 69 | ON | OFF | ON | OFF | OFF | OFF | ON | OFF |
| 70 | OFF | ON | ON | OFF | OFF | OFF | ON | OFF |

Table B. Switch Settings for SW1 D-Type Control *(Continued)*

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|-----------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 71 | ON | ON | ON | OFF | OFF | OFF | ON | OFF |
| 72 | OFF | OFF | OFF | ON | OFF | OFF | ON | OFF |
| 73 | ON | OFF | OFF | ON | OFF | OFF | ON | OFF |
| 74 | OFF | ON | OFF | ON | OFF | OFF | ON | OFF |
| 75 | ON | ON | OFF | ON | OFF | OFF | ON | OFF |
| 76 | OFF | OFF | ON | ON | OFF | OFF | ON | OFF |
| 77 | ON | OFF | ON | ON | OFF | OFF | ON | OFF |
| 78 | OFF | ON | ON | ON | OFF | OFF | ON | OFF |
| 79 | ON | ON | ON | ON | OFF | OFF | ON | OFF |
| 80 | OFF | OFF | OFF | OFF | ON | OFF | ON | OFF |
| 81 | ON | OFF | OFF | OFF | ON | OFF | ON | OFF |
| 82 | OFF | ON | OFF | OFF | ON | OFF | ON | OFF |
| 83 | ON | ON | OFF | OFF | ON | OFF | ON | OFF |
| 84 | OFF | OFF | ON | OFF | ON | OFF | ON | OFF |
| 85 | ON | OFF | ON | OFF | ON | OFF | ON | OFF |
| 86 | OFF | ON | ON | OFF | ON | OFF | ON | OFF |
| 87 | ON | ON | ON | OFF | ON | OFF | ON | OFF |
| 88 | OFF | OFF | OFF | ON | ON | OFF | ON | OFF |
| 89 | ON | OFF | OFF | ON | ON | OFF | ON | OFF |
| 90 | OFF | ON | OFF | ON | ON | OFF | ON | OFF |
| 91 | ON | ON | OFF | ON | ON | OFF | ON | OFF |
| 92 | OFF | OFF | ON | ON | ON | OFF | ON | OFF |
| 93 | ON | OFF | ON | ON | ON | OFF | ON | OFF |
| 94 | OFF | ON | ON | ON | ON | OFF | ON | OFF |
| 95 | ON | ON | ON | ON | ON | OFF | ON | OFF |
| 96 | OFF | OFF | OFF | OFF | OFF | ON | ON | OFF |
| 97 | ON | OFF | OFF | OFF | OFF | ON | ON | OFF |
| 98 | OFF | ON | OFF | OFF | OFF | ON | ON | OFF |
| 99 | ON | ON | OFF | OFF | OFF | ON | ON | OFF |
| 100 | OFF | OFF | ON | OFF | OFF | ON | ON | OFF |
| 101 | ON | OFF | ON | OFF | OFF | ON | ON | OFF |
| 102 | OFF | ON | ON | OFF | OFF | ON | ON | OFF |
| 103 | ON | ON | ON | OFF | OFF | ON | ON | OFF |
| 104 | OFF | OFF | OFF | ON | OFF | ON | ON | OFF |
| 105 | ON | OFF | OFF | ON | OFF | ON | ON | OFF |

Table B. Switch Settings for SW1 D-Type Control (Continued)

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|-----------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 106 | OFF | ON | OFF | ON | OFF | ON | ON | OFF |
| 107 | ON | ON | OFF | ON | OFF | ON | ON | OFF |
| 108 | OFF | OFF | ON | ON | OFF | ON | ON | OFF |
| 109 | ON | OFF | ON | ON | OFF | ON | ON | OFF |
| 110 | OFF | ON | ON | ON | OFF | ON | ON | OFF |
| 111 | ON | ON | ON | ON | OFF | ON | ON | OFF |
| 112 | OFF | OFF | OFF | OFF | ON | ON | ON | OFF |
| 113 | ON | OFF | OFF | OFF | ON | ON | ON | OFF |
| 114 | OFF | ON | OFF | OFF | ON | ON | ON | OFF |
| 115 | ON | ON | OFF | OFF | ON | ON | ON | OFF |
| 116 | OFF | OFF | ON | OFF | ON | ON | ON | OFF |
| 117 | ON | OFF | ON | OFF | ON | ON | ON | OFF |
| 118 | OFF | ON | ON | OFF | ON | ON | ON | OFF |
| 119 | ON | ON | ON | OFF | ON | ON | ON | OFF |
| 120 | OFF | OFF | OFF | ON | ON | ON | ON | OFF |
| 121 | ON | OFF | OFF | ON | ON | ON | ON | OFF |
| 122 | OFF | ON | OFF | ON | ON | ON | ON | OFF |
| 123 | ON | ON | OFF | ON | ON | ON | ON | OFF |
| 124 | OFF | OFF | ON | ON | ON | ON | ON | OFF |
| 125 | ON | OFF | ON | ON | ON | ON | ON | OFF |
| 126 | OFF | ON | ON | ON | ON | ON | ON | OFF |
| 127 | ON | ON | ON | ON | ON | ON | ON | OFF |
| 128 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | ON |
| 129 | ON | OFF | OFF | OFF | OFF | OFF | OFF | ON |
| 130 | OFF | ON | OFF | OFF | OFF | OFF | OFF | ON |
| 131 | ON | ON | OFF | OFF | OFF | OFF | OFF | ON |
| 132 | OFF | OFF | ON | OFF | OFF | OFF | OFF | ON |
| 133 | ON | OFF | ON | OFF | OFF | OFF | OFF | ON |
| 134 | OFF | ON | ON | OFF | OFF | OFF | OFF | ON |
| 135 | ON | ON | ON | OFF | OFF | OFF | OFF | ON |
| 136 | OFF | OFF | OFF | ON | OFF | OFF | OFF | ON |
| 137 | ON | OFF | OFF | ON | OFF | OFF | OFF | ON |
| 138 | OFF | ON | OFF | ON | OFF | OFF | OFF | ON |
| 139 | ON | ON | OFF | ON | OFF | OFF | OFF | ON |
| 140 | OFF | OFF | ON | ON | OFF | OFF | OFF | ON |

Table B. Switch Settings for SW1 D-Type Control (Continued)

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|-----------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 141 | ON | OFF | ON | ON | OFF | OFF | OFF | ON |
| 142 | OFF | ON | ON | ON | OFF | OFF | OFF | ON |
| 143 | ON | ON | ON | ON | OFF | OFF | OFF | ON |
| 144 | OFF | OFF | OFF | OFF | ON | OFF | OFF | ON |
| 145 | ON | OFF | OFF | OFF | ON | OFF | OFF | ON |
| 146 | OFF | ON | OFF | OFF | ON | OFF | OFF | ON |
| 147 | ON | ON | OFF | OFF | ON | OFF | OFF | ON |
| 148 | OFF | OFF | ON | OFF | ON | OFF | OFF | ON |
| 149 | ON | OFF | ON | OFF | ON | OFF | OFF | ON |
| 150 | OFF | ON | ON | OFF | ON | OFF | OFF | ON |
| 151 | ON | ON | ON | OFF | ON | OFF | OFF | ON |
| 152 | OFF | OFF | OFF | ON | ON | OFF | OFF | ON |
| 153 | ON | OFF | OFF | ON | ON | OFF | OFF | ON |
| 154 | OFF | ON | OFF | ON | ON | OFF | OFF | ON |
| 155 | ON | ON | OFF | ON | ON | OFF | OFF | ON |
| 156 | OFF | OFF | ON | ON | ON | OFF | OFF | ON |
| 157 | ON | OFF | ON | ON | ON | OFF | OFF | ON |
| 158 | OFF | ON | ON | ON | ON | OFF | OFF | ON |
| 159 | ON | ON | ON | ON | ON | OFF | OFF | ON |
| 160 | OFF | OFF | OFF | OFF | OFF | ON | OFF | ON |
| 161 | ON | OFF | OFF | OFF | OFF | ON | OFF | ON |
| 162 | OFF | ON | OFF | OFF | OFF | ON | OFF | ON |
| 163 | ON | ON | OFF | OFF | OFF | ON | OFF | ON |
| 164 | OFF | OFF | ON | OFF | OFF | ON | OFF | ON |
| 165 | ON | OFF | ON | OFF | OFF | ON | OFF | ON |
| 166 | OFF | ON | ON | OFF | OFF | ON | OFF | ON |
| 167 | ON | ON | ON | OFF | OFF | ON | OFF | ON |
| 168 | OFF | OFF | OFF | ON | OFF | ON | OFF | ON |
| 169 | ON | OFF | OFF | ON | OFF | ON | OFF | ON |
| 170 | OFF | ON | OFF | ON | OFF | ON | OFF | ON |
| 171 | ON | ON | OFF | ON | OFF | ON | OFF | ON |
| 172 | OFF | OFF | ON | ON | OFF | ON | OFF | ON |
| 173 | ON | OFF | ON | ON | OFF | ON | OFF | ON |
| 174 | OFF | ON | ON | ON | OFF | ON | OFF | ON |
| 175 | ON | ON | ON | ON | OFF | ON | OFF | ON |

Table B. Switch Settings for SW1 D-Type Control (Continued)

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|--------------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 176 | OFF | OFF | OFF | OFF | ON | ON | OFF | ON |
| 177 | ON | OFF | OFF | OFF | ON | ON | OFF | ON |
| 178 | OFF | ON | OFF | OFF | ON | ON | OFF | ON |
| 179 | ON | ON | OFF | OFF | ON | ON | OFF | ON |
| 180 | OFF | OFF | ON | OFF | ON | ON | OFF | ON |
| 181 | ON | OFF | ON | OFF | ON | ON | OFF | ON |
| 182 | OFF | ON | ON | OFF | ON | ON | OFF | ON |
| 183 | ON | ON | ON | OFF | ON | ON | OFF | ON |
| 184 | OFF | OFF | OFF | ON | ON | ON | OFF | ON |
| 185 | ON | OFF | OFF | ON | ON | ON | OFF | ON |
| 186 | OFF | ON | OFF | ON | ON | ON | OFF | ON |
| 187 | ON | ON | OFF | ON | ON | ON | OFF | ON |
| 188 | OFF | OFF | ON | ON | ON | ON | OFF | ON |
| 189 | ON | OFF | ON | ON | ON | ON | OFF | ON |
| 190 | OFF | ON | ON | ON | ON | ON | OFF | ON |
| 191 | ON | ON | ON | ON | ON | ON | OFF | ON |
| 192 | OFF | OFF | OFF | OFF | OFF | OFF | ON | ON |
| 193 | ON | OFF | OFF | OFF | OFF | OFF | ON | ON |
| 194 | OFF | ON | OFF | OFF | OFF | OFF | ON | ON |
| 195 | ON | ON | OFF | OFF | OFF | OFF | ON | ON |
| 196 | OFF | OFF | ON | OFF | OFF | OFF | ON | ON |
| 197 | ON | OFF | ON | OFF | OFF | OFF | ON | ON |
| 198 | OFF | ON | ON | OFF | OFF | OFF | ON | ON |
| 199 | ON | ON | ON | OFF | OFF | OFF | ON | ON |
| 200 | OFF | OFF | OFF | ON | OFF | OFF | ON | ON |
| 201 | ON | OFF | OFF | ON | OFF | OFF | ON | ON |
| 202 | OFF | ON | OFF | ON | OFF | OFF | ON | ON |
| 203 | ON | ON | OFF | ON | OFF | OFF | ON | ON |
| 204 | OFF | OFF | ON | ON | OFF | OFF | ON | ON |
| 205 | ON | OFF | ON | ON | OFF | OFF | ON | ON |
| 206 | OFF | ON | ON | ON | OFF | OFF | ON | ON |
| 207 | ON | ON | ON | ON | OFF | OFF | ON | ON |
| 208 | OFF | OFF | OFF | OFF | ON | OFF | ON | ON |
| 209 | ON | OFF | OFF | OFF | ON | OFF | ON | ON |
| 210 | OFF | ON | OFF | OFF | ON | OFF | ON | ON |

Table B. Switch Settings for SW1 D-Type Control *(Continued)*

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|--------------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 211 | ON | ON | OFF | OFF | ON | OFF | ON | ON |
| 212 | OFF | OFF | ON | OFF | ON | OFF | ON | ON |
| 213 | ON | OFF | ON | OFF | ON | OFF | ON | ON |
| 214 | OFF | ON | ON | OFF | ON | OFF | ON | ON |
| 215 | ON | ON | ON | OFF | ON | OFF | ON | ON |
| 216 | OFF | OFF | OFF | ON | ON | OFF | ON | ON |
| 217 | ON | OFF | OFF | ON | ON | OFF | ON | ON |
| 218 | OFF | ON | OFF | ON | ON | OFF | ON | ON |
| 219 | ON | ON | OFF | ON | ON | OFF | ON | ON |
| 220 | OFF | OFF | ON | ON | ON | OFF | ON | ON |
| 221 | ON | OFF | ON | ON | ON | OFF | ON | ON |
| 222 | OFF | ON | ON | ON | ON | OFF | ON | ON |
| 223 | ON | ON | ON | ON | ON | OFF | ON | ON |
| 224 | OFF | OFF | OFF | OFF | OFF | ON | ON | ON |
| 225 | ON | OFF | OFF | OFF | OFF | ON | ON | ON |
| 226 | OFF | ON | OFF | OFF | OFF | ON | ON | ON |
| 227 | ON | ON | OFF | OFF | OFF | ON | ON | ON |
| 228 | OFF | OFF | ON | OFF | OFF | ON | ON | ON |
| 229 | ON | OFF | ON | OFF | OFF | ON | ON | ON |
| 230 | OFF | ON | ON | OFF | OFF | ON | ON | ON |
| 231 | ON | ON | ON | OFF | OFF | ON | ON | ON |
| 232 | OFF | OFF | OFF | ON | OFF | ON | ON | ON |
| 233 | ON | OFF | OFF | ON | OFF | ON | ON | ON |
| 234 | OFF | ON | OFF | ON | OFF | ON | ON | ON |
| 235 | ON | ON | OFF | ON | OFF | ON | ON | ON |
| 236 | OFF | OFF | ON | ON | OFF | ON | ON | ON |
| 237 | ON | OFF | ON | ON | OFF | ON | ON | ON |
| 238 | OFF | ON | ON | ON | OFF | ON | ON | ON |
| 239 | ON | ON | ON | ON | OFF | ON | ON | ON |
| 240 | OFF | OFF | OFF | OFF | ON | ON | ON | ON |
| 241 | ON | OFF | OFF | OFF | ON | ON | ON | ON |
| 242 | OFF | ON | OFF | OFF | ON | ON | ON | ON |
| 243 | ON | ON | OFF | OFF | ON | ON | ON | ON |
| 244 | OFF | OFF | ON | OFF | ON | ON | ON | ON |
| 245 | ON | OFF | ON | OFF | ON | ON | ON | ON |

Table B. Switch Settings for SW1 D-Type Control *(Continued)*

| SPECTRA ADDRESS | SWITCH SETTING | | | | | | | |
|--------------------|----------------|-------|-------|-------|-------|-------|-------|-------|
| | SW1-1 | SW1-2 | SW1-3 | SW1-4 | SW1-5 | SW1-6 | SW1-7 | SW1-8 |
| 246 | OFF | ON | ON | OFF | ON | ON | ON | ON |
| 247 | ON | ON | ON | OFF | ON | ON | ON | ON |
| 248 | OFF | OFF | OFF | ON | ON | ON | ON | ON |
| 249 | ON | OFF | OFF | ON | ON | ON | ON | ON |
| 250 | OFF | ON | OFF | ON | ON | ON | ON | ON |
| 251 | ON | ON | OFF | ON | ON | ON | ON | ON |
| 252 | OFF | OFF | ON | ON | ON | ON | ON | ON |
| 253 | ON | OFF | ON | ON | ON | ON | ON | ON |
| 254 | OFF | ON | ON | ON | ON | ON | ON | ON |

Getting Started

Once installed, apply power to the Spectra IV/Spectra IV SE dome system. The system will start a configuration sequence. When configuration is done, the following information is displayed:

Pelco Spectra IV/Spectra IV SE

Version X.XX

D Address: 1

P Address: 2

Comm 2400, N, 8, 1

CONFIGURE DONE

This information will remain on the monitor until dome operation begins.

Refer to the following pages to learn how to operate and program your dome system.

NOTE: When installing a Spectra IV dome drive in a Spectra III™ back box for the first time, a rebooting message will occur. When the dome finishes rebooting, it will continue with a normal configuration sequence.

How to Operate Your Dome System

| Operation | How to Control | | | | | | | | |
|-----------------------|---|-----------|-----------|-------------|-----------|------------|-----------|-----------|-----------|
| Pan and Tilt | Move joystick or press the direction keys left/right and up/down. | | | | | | | | |
| Zoom Far | <p>To zoom far, do the following:</p> <ol style="list-style-type: none">1. Press the Zoom Tele button or turn the joystick clockwise until zoom stops at the 32X zoom limit.2. Release the button or joystick for one second.3. To continue zooming (digitally), press the button or turn the joystick clockwise again until you have the picture you want or reach the digital zoom¹ limit. | | | | | | | | |
| Zoom Wide | Press the Zoom Wide button or turn the joystick counterclockwise. | | | | | | | | |
| Scanning | <table><tr><td>Stop Scan</td><td>Preset 96</td></tr><tr><td>Random Scan</td><td>Preset 97</td></tr><tr><td>Frame Scan</td><td>Preset 98</td></tr><tr><td>Auto Scan</td><td>Preset 99</td></tr></table> | Stop Scan | Preset 96 | Random Scan | Preset 97 | Frame Scan | Preset 98 | Auto Scan | Preset 99 |
| Stop Scan | Preset 96 | | | | | | | | |
| Random Scan | Preset 97 | | | | | | | | |
| Frame Scan | Preset 98 | | | | | | | | |
| Auto Scan | Preset 99 | | | | | | | | |
| Presets | Refer to the documentation supplied with the control system. | | | | | | | | |
| Patterns ² | Refer to the documentation supplied with the control system. | | | | | | | | |
| Zones | Refer to the <i>Zones</i> section and to the documentation supplied with the control system. | | | | | | | | |
| Alarms | Refer to the <i>Alarms</i> section in this manual. | | | | | | | | |
| Auto Flip | Turn on or off in the programming menu. Refer to the <i>Auto Flip</i> section in this manual. | | | | | | | | |

¹ Digital zoom magnifies the image electronically and the picture may appear pixilated. The larger the digital zoom limit the greater the reduction in resolution.

² The dome cannot do electronic zoom in a pattern. Optical zoom will operate in a pattern.

QUICK PROGRAMMING GUIDE



Access main menu (preset 95). See the *Accessing Main Menu (Preset 95)* section.



Use the joystick to position the cursor beside menu selection.

NOTE: If your controller does not have a joystick, use the up or down key.



Press Iris Open, the submenu/cursor moves to the right.



Move the joystick up or down to view selections.



Press Iris Open to make selection.



Press Iris Close to cancel selection.

ACCESSING MAIN MENU (PRESET 95)

You can call up the main menu on your monitor by programming (setting or creating) preset 95 (preset 28 if in AD32-preset mode).

Programming preset 95 for Pelco's controllers varies according to the type of controller you are using. Instructions for programming preset 95 are given below for various Pelco controllers.

CM6700/CM6800

1. Enter the number of the Spectra IV/Spectra IV SE dome system and press the CAM key.
2. Enter 95 and hold the PRESET key for two seconds.
3. In the Edit Preset menu, arrow to SET and press the ACK key. The main menu appears.

KBD200A/KBD300A (Direct Mode Only)

1. Enter 95.
2. Hold the PRESET key (approximately five seconds) until the main menu appears on the screen.

CM9500

1. Enter the number of the Spectra IV/Spectra IV SE dome system and press the CAM key. The main menu appears.
2. Highlight SETUP in the main menu and press the SELECT key.
3. Highlight CAM in the Setup menu and press the SELECT key.
4. Highlight PRESET in the Camera menu and press the SELECT key.
5. Enter 95 and press the F1 key. The main menu appears.

CM9740/CM9760/CM9770/CM9780

1. Press the ESCAPE key to open the main menu. Select DEF. The Define submenu appears.
2. Enter your four-digit PIN *if this is your first time entering this mode*.
3. Enter 95 and select PRST. The main menu appears on the monitor.
4. Select the Quit icon to return to the default menu.

KBD4000/KBD4002

1. Press the SPOT MONITOR key.
2. Enter 95, then hold the PRESET key (approximately five seconds) until the main menu appears on the screen.

MPT9500

Standard Coaxitron Mode

1. Enter 95 and press the PRESET SET key.
2. Position the asterisk in the YES row and press the F1 key. The main menu appears.

Extended Coaxitron or RS-485 Mode

1. Enter 95 and press the PRESET SET key.
2. Press the F2 key. The main menu appears.

NET300/NET350/NET4001A

1. Check the Set box.
2. Click the preset 95 button. The main menu appears.


WS5050

1. Right-click in the video pane of the Spectra IV/Spectra IV SE dome system.
2. Click Preset and then click Select Preset.
3. Enter 95 and then click OK.


VCD5000

1. Enter 95 for the preset action. The shortcuts menu appears.
2. Press the Preset button on the KBD5000.


16X LowLight Color Menu Tree

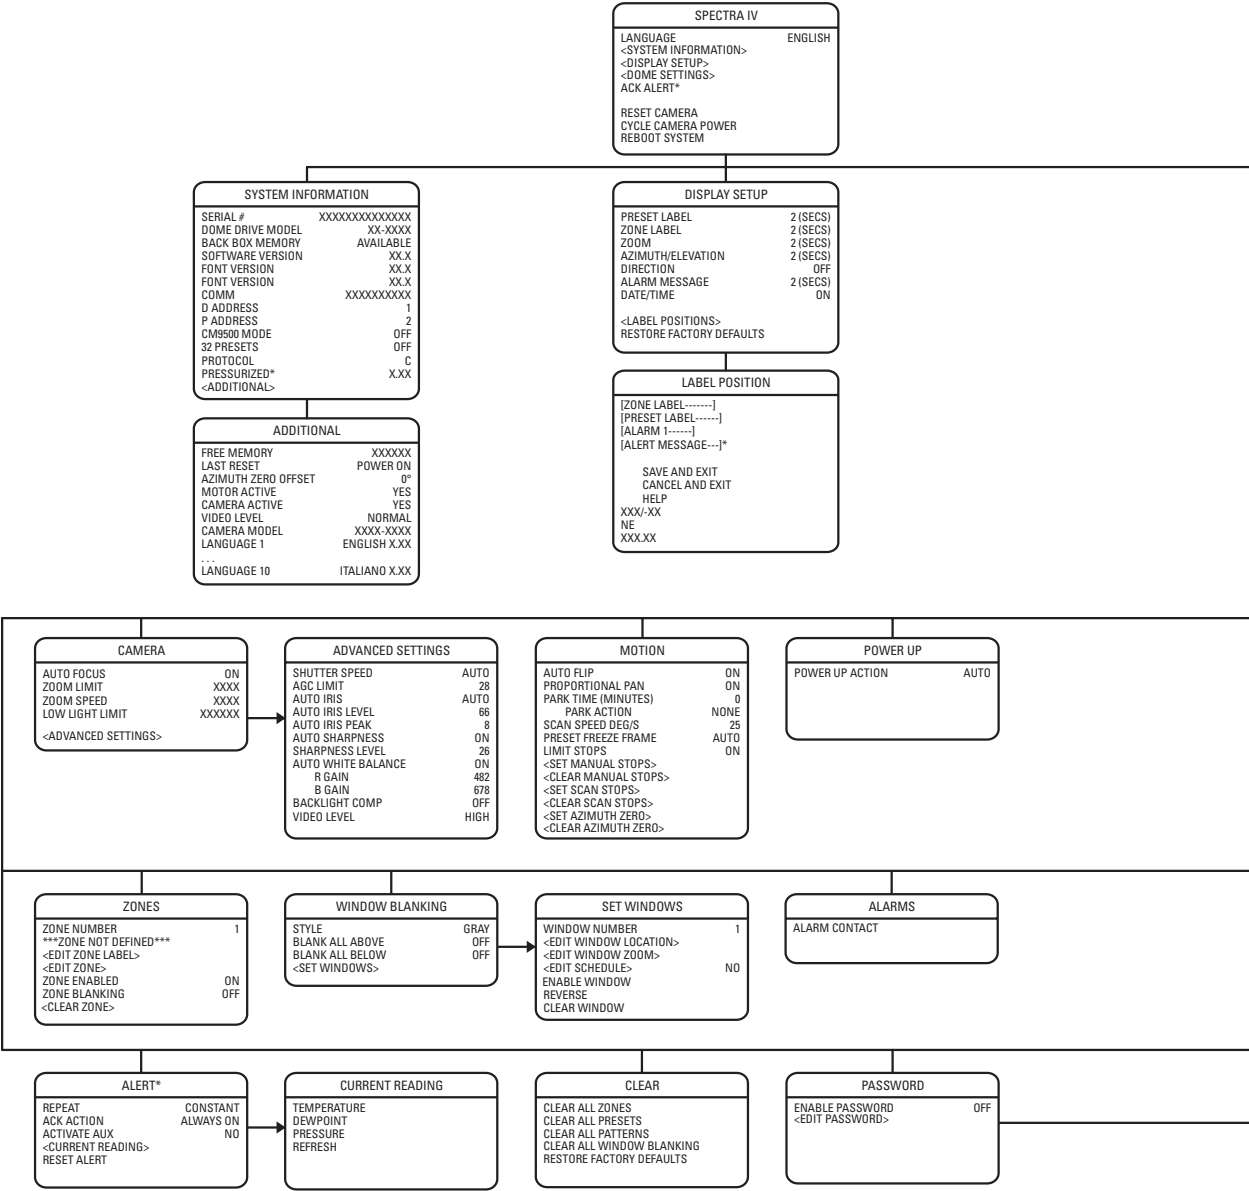


*This setting applies only to Pressurized Spectra IV dome systems. Spectra IV systems that are not pressurized will not display this menu item.

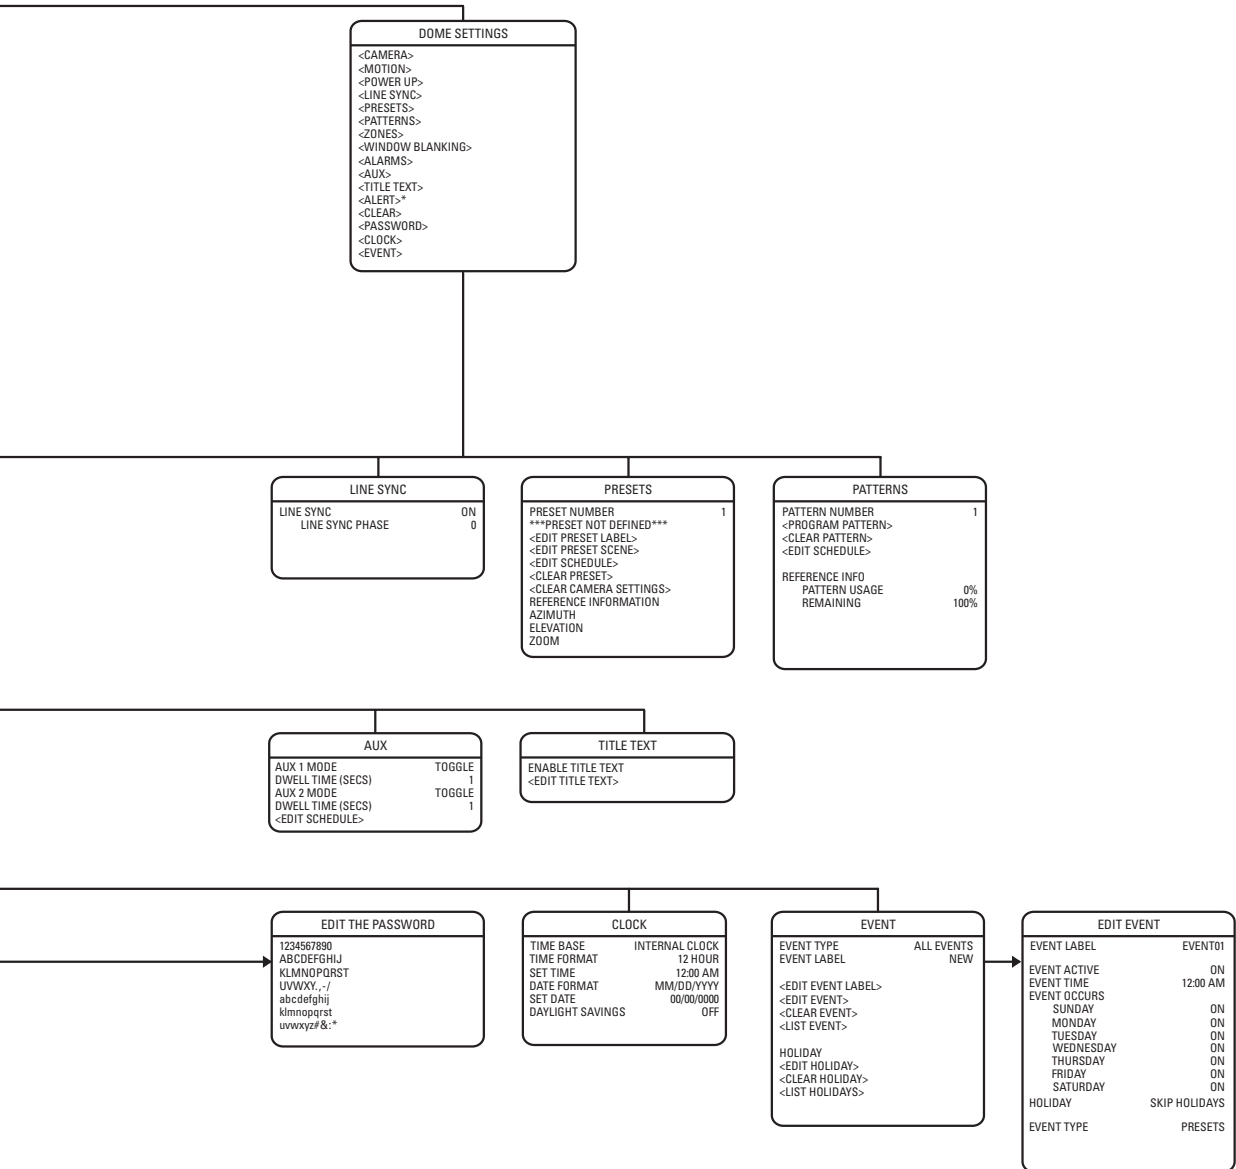


22X EXview LowLight Black-White Menu Tree

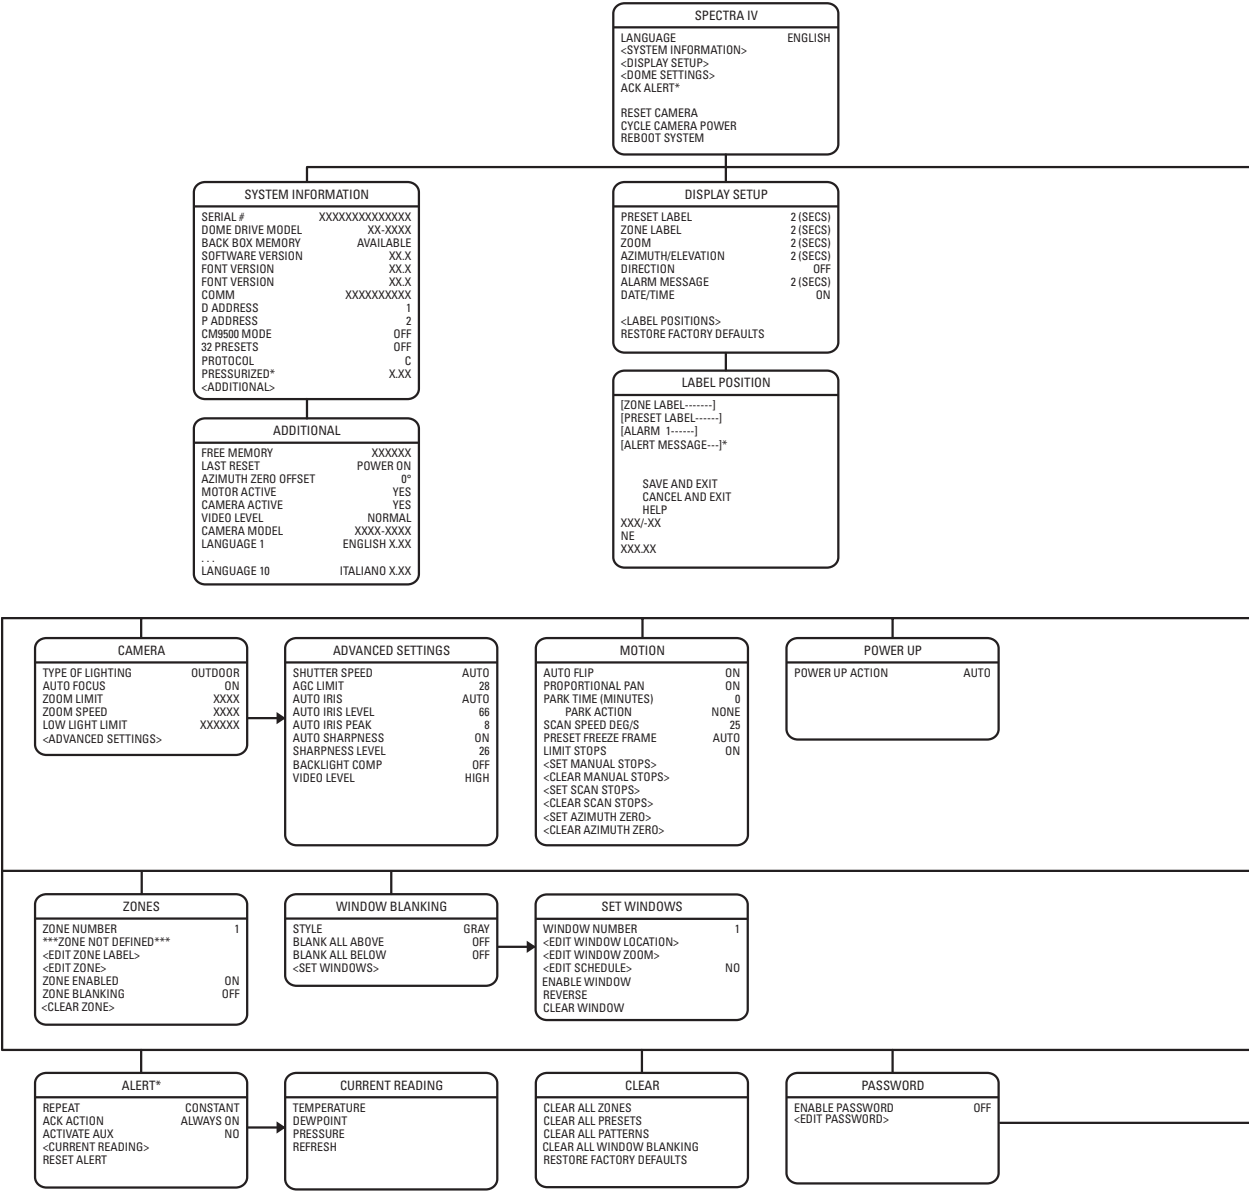


*This setting applies only to Pressurized Spectra IV dome systems. Spectra IV systems that are not pressurized will not display this menu item.

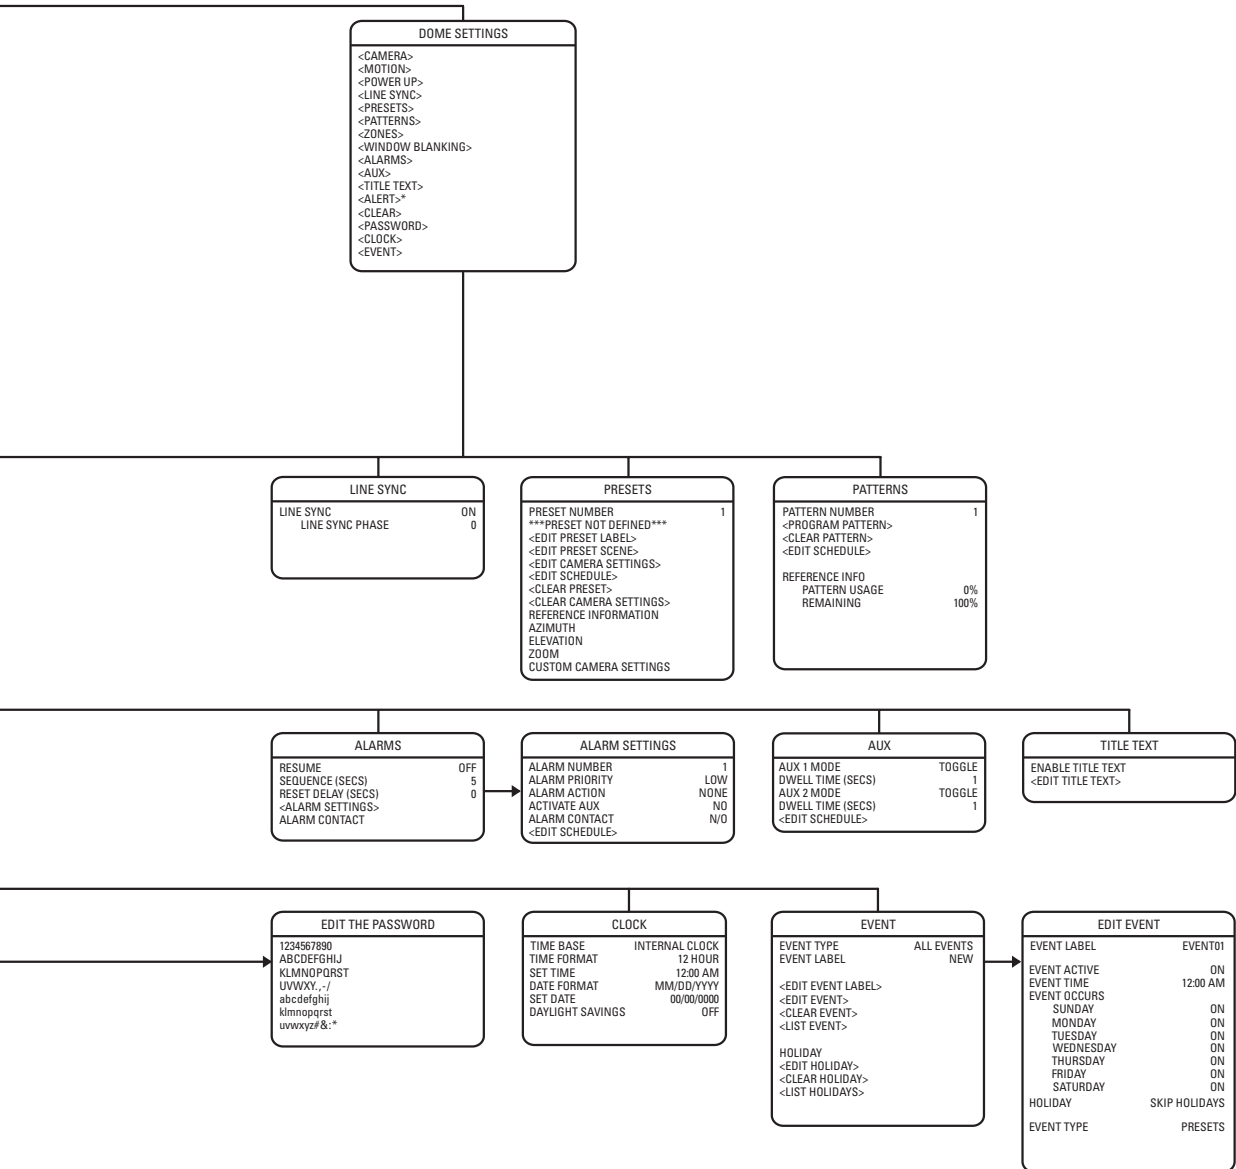


22X EXview LowLight Color Menu Tree

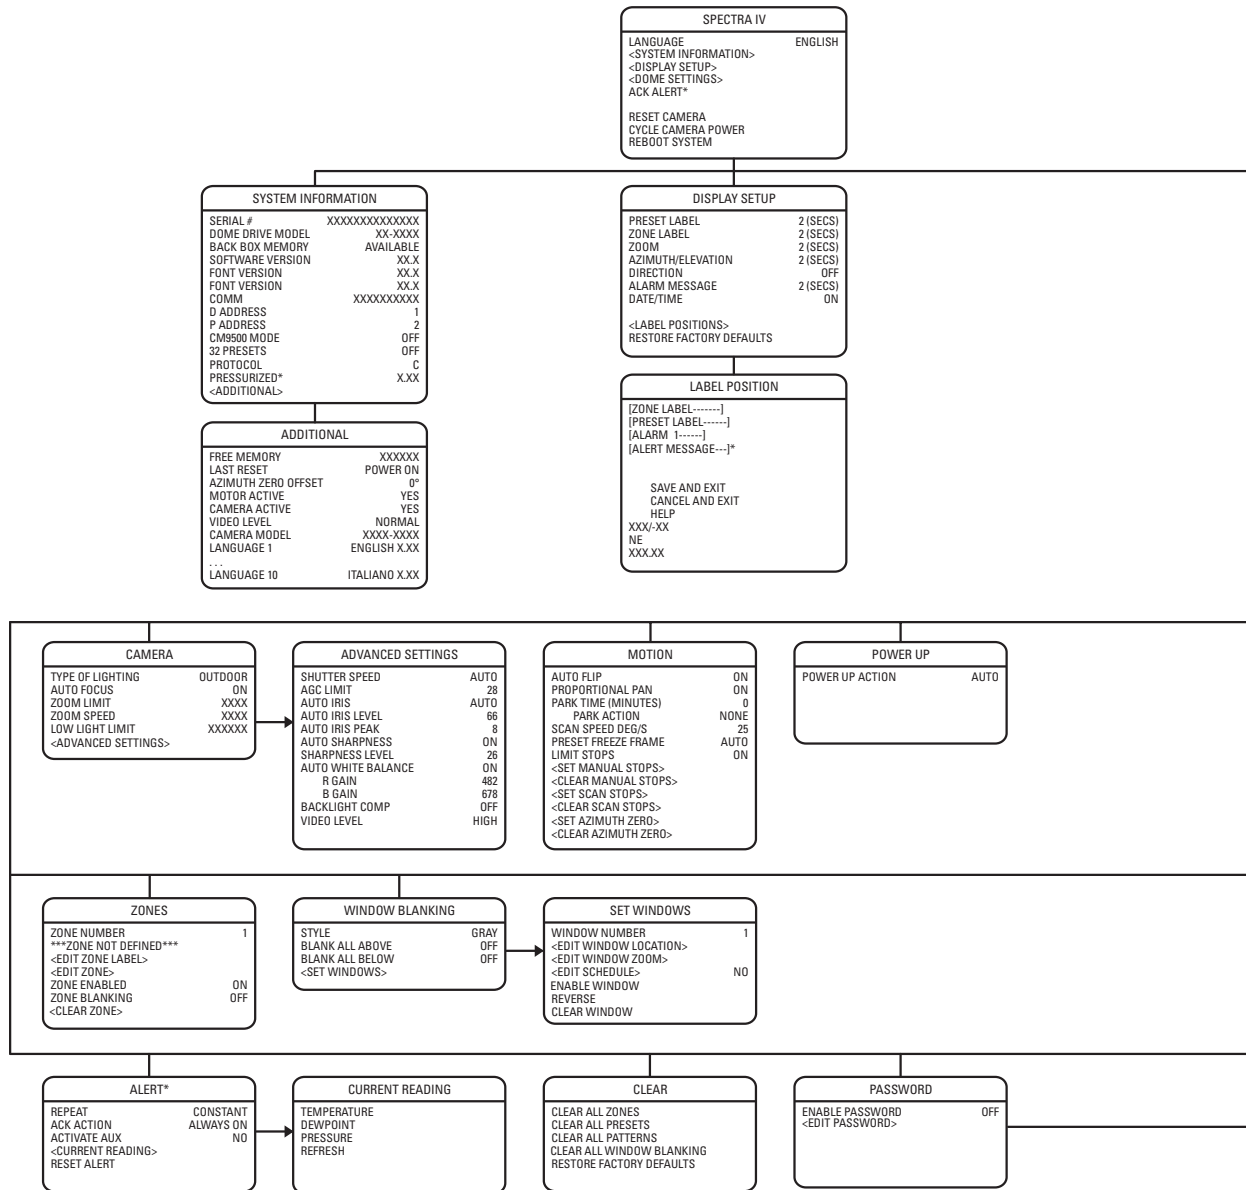


*This setting applies only to Pressurized Spectra IV dome systems. Spectra IV systems that are not pressurized will not display this menu item.

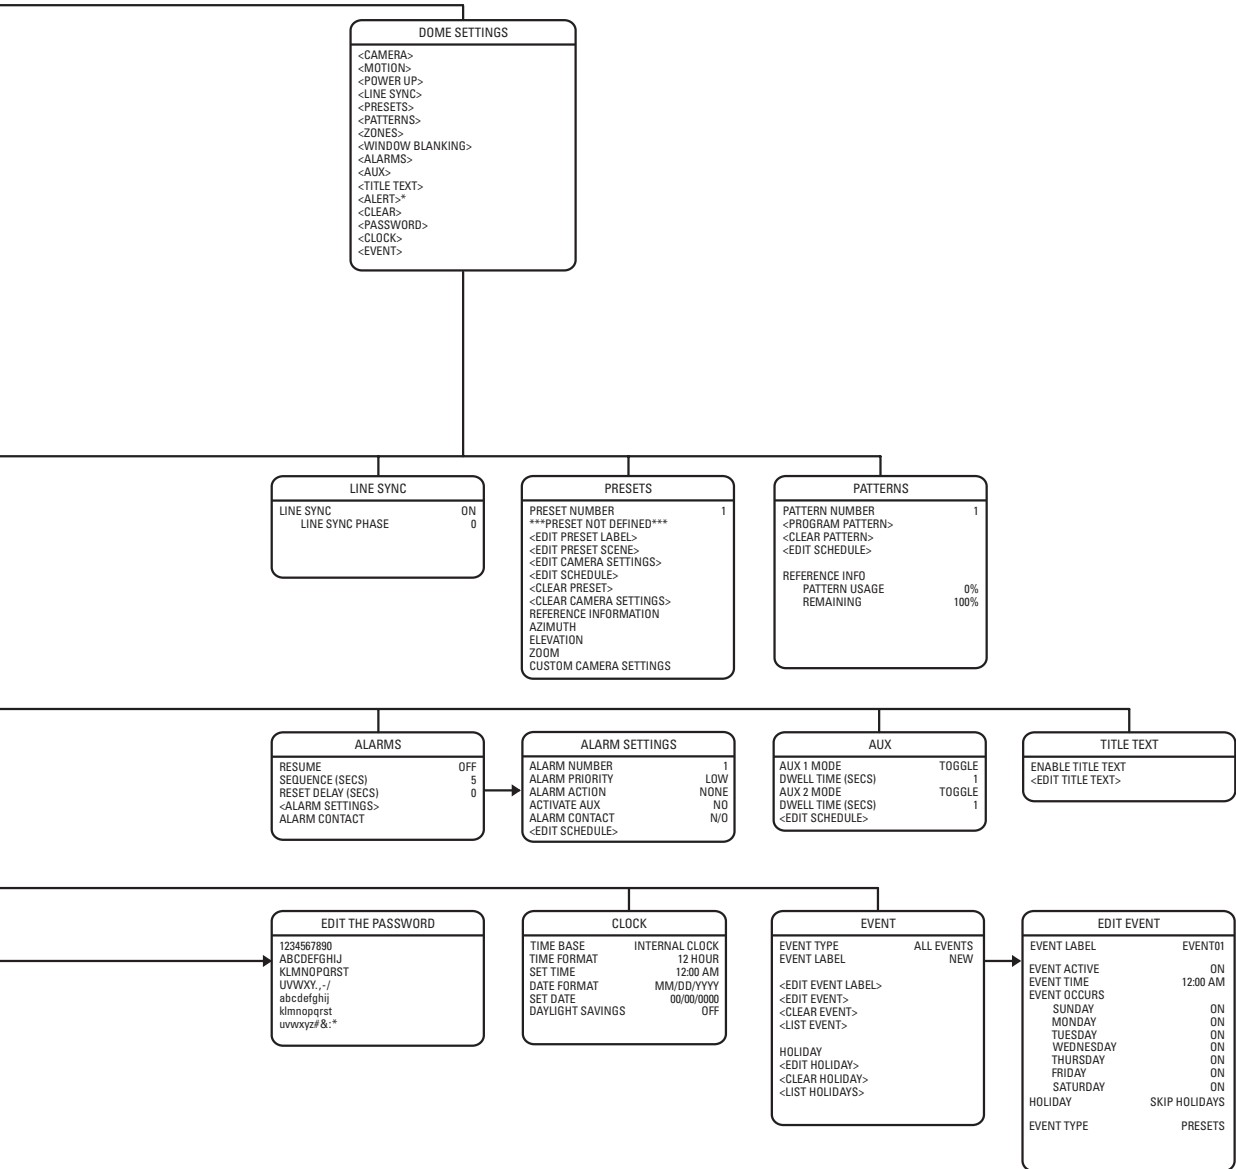


23X LowLight Day/Night Menu Tree

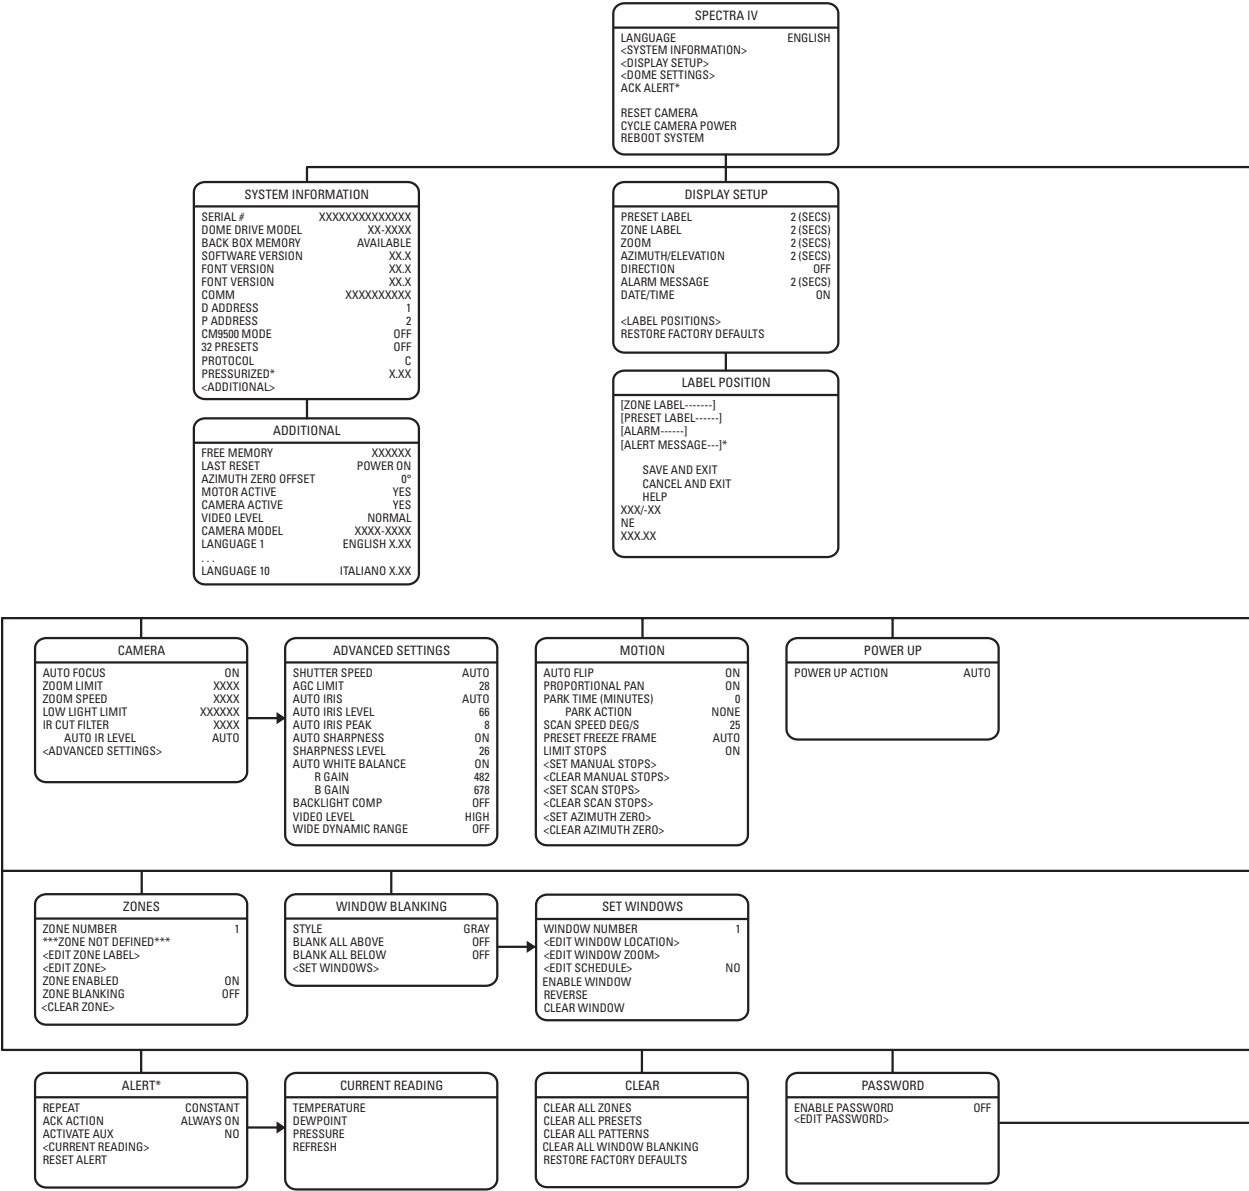


*This setting applies only to Pressurized Spectra IV dome systems. Spectra IV systems that are not pressurized will not display this menu item.

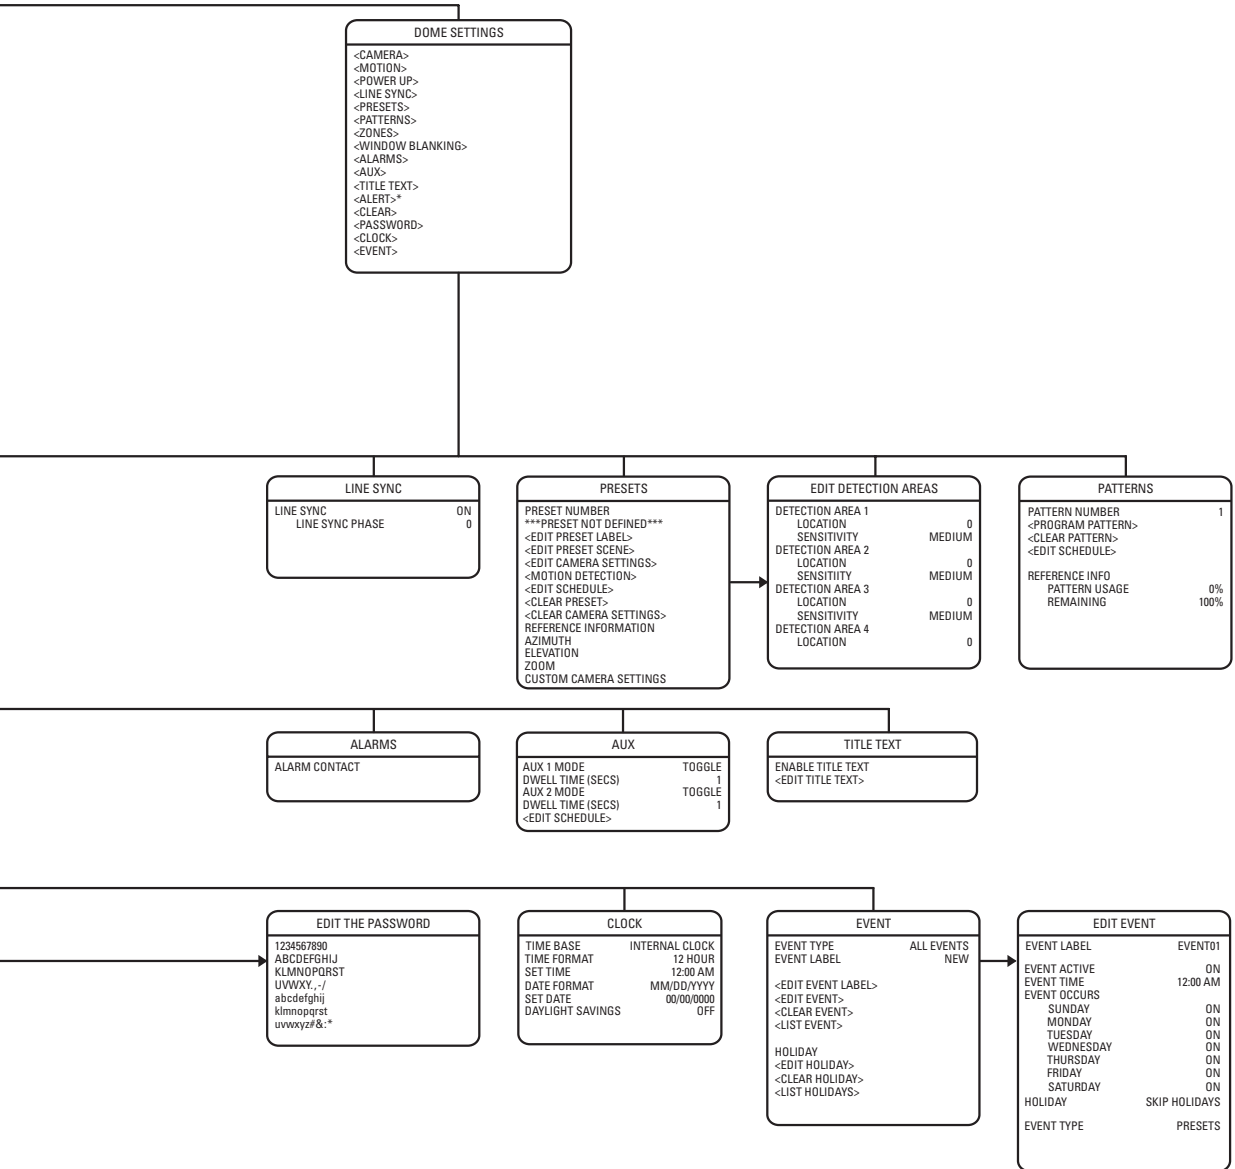


35X LowLight Day/Night Menu Tree

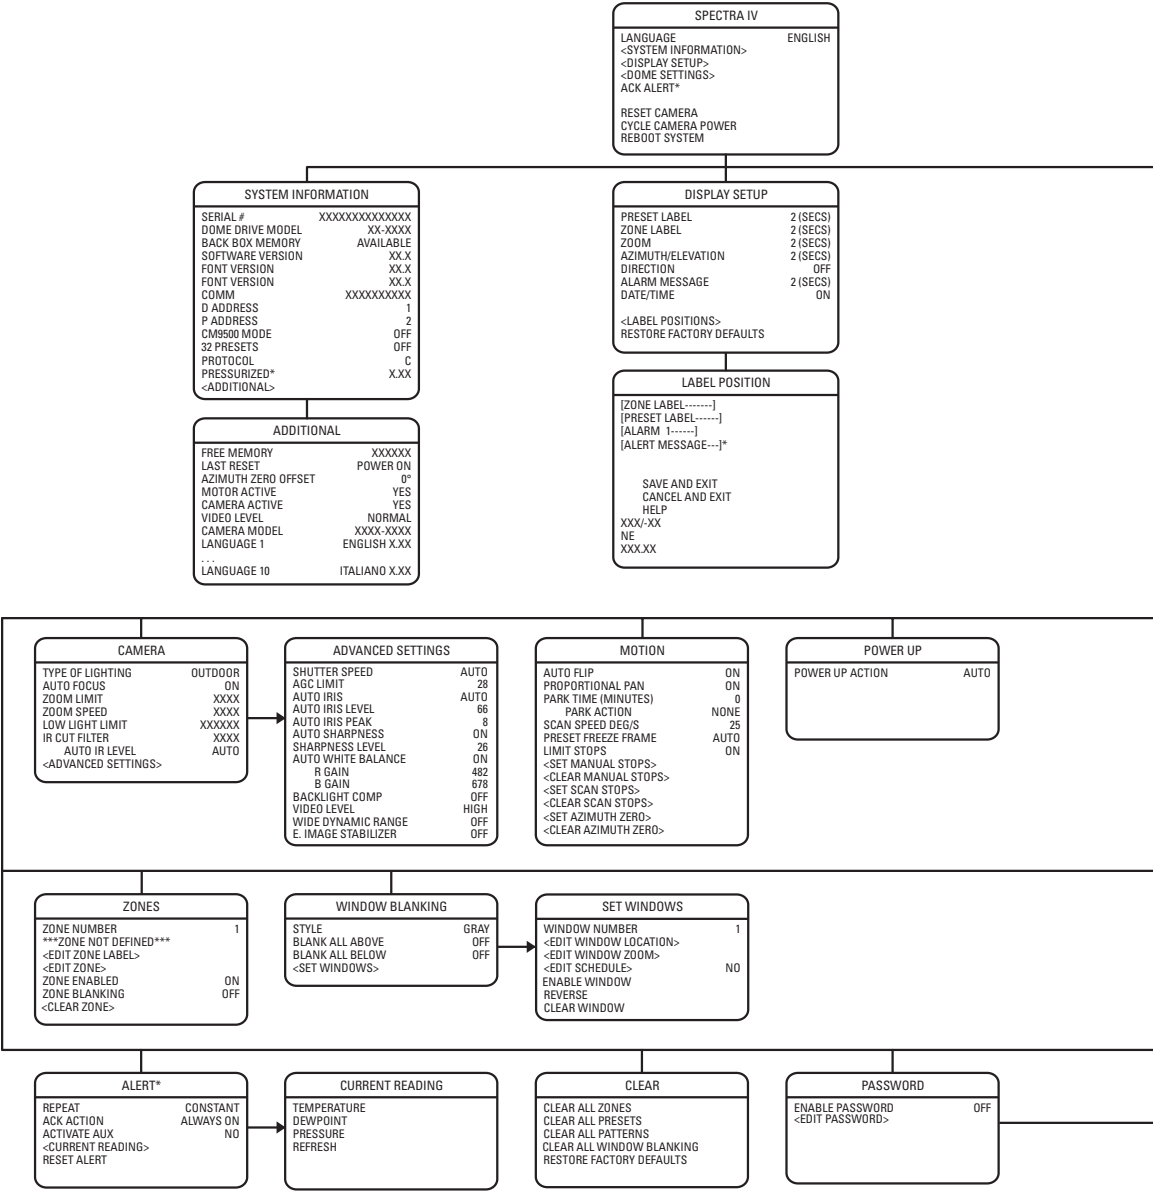

*This setting applies only to Pressurized Spectra IV dome systems. Spectra IV systems that are not pressurized will not display this menu item.

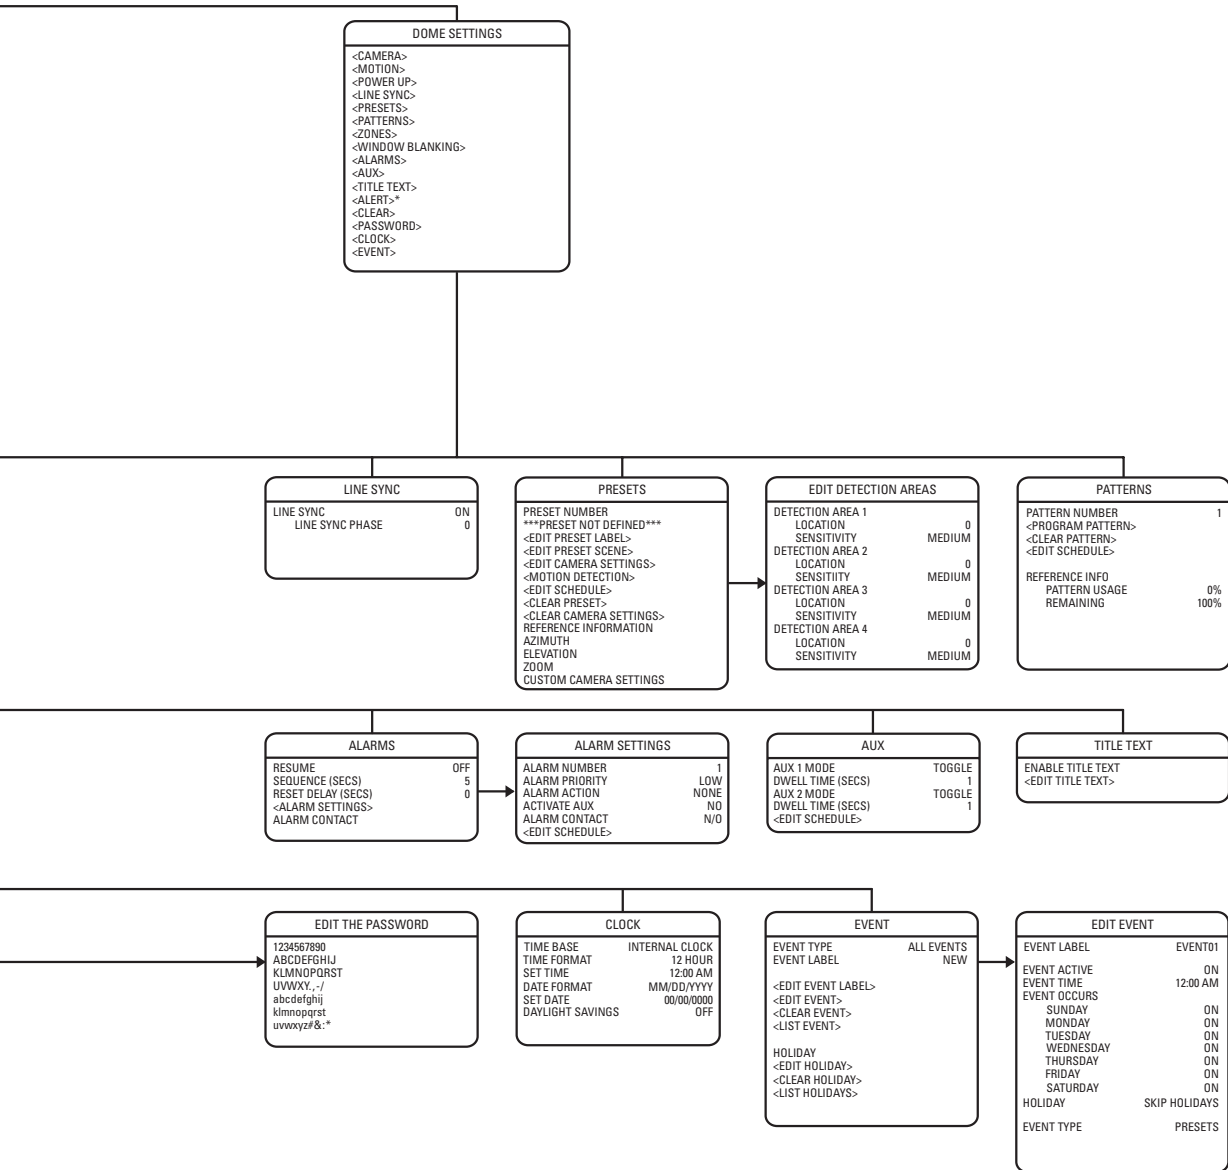

Language

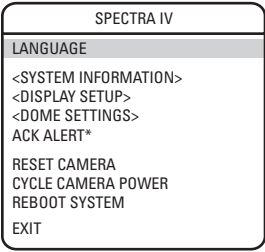

The language for the on-screen menus is selectable. Available languages include English, Spanish, French, German, Italian, Portuguese, Russian, Polish, Turkish, and Czechoslovakian. The factory default language is English.

To change the display language:

1. Use the joystick to position the cursor beside LANGUAGE.
2. Press Iris Open. The cursor moves to the right, beside the current, selected language.
3. Move the joystick up or down to view selections. Press Iris Open to enter selection. All on-screen menus are changed to the selected language.

* This setting applies only to Pressurized Spectra IV dome systems.

System Information

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



SYSTEM INFORMATION

SERIAL #

DOME DRIVE MODEL

BACK BOX MEMORY

SOFTWARE VERSION

FONT VERSION 1

FONT VERSION 2

COMM

D ADDRESS

P ADDRESS

CM9500 MODE

32 PRESETS

PROTOCOL

PRESSURIZED*

<ADDITIONAL>

BACK

EXIT



ADDITIONAL

FREE MEMORY

LAST RESET

AZIMUTH ZERO OFFSET

MOTOR ACTIVE

CAMERA ACTIVE

VIDEO LEVEL

CAMERA MODEL

LANGUAGE 1

LANGUAGE 2

LANGUAGE 3

LANGUAGE 4

LANGUAGE 5

LANGUAGE 6

LANGUAGE 7

LANGUAGE 8

LANGUAGE 9

LANGUAGE 10

BACK

EXIT

The System Information screen displays dome drive model, software version, available memory, and other diagnostic information.



System settings cannot be changed using this screen. This screen is for reference only.

Use the following steps to display the System Information screen:

1. Use the joystick to position the cursor beside SYSTEM INFORMATION.
2. Press Iris Open. The SYSTEM INFORMATION screen opens.

* This setting applies only to Pressurized Spectra IV dome systems.

Display Setup

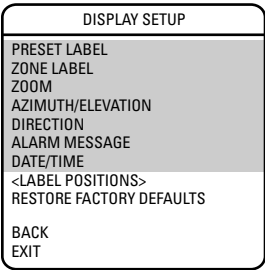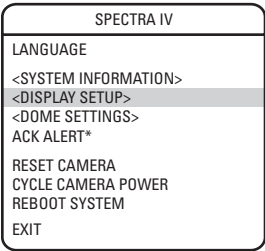

Display setup allows you to program how labels are displayed on the monitor. The following labels are available:

| | |
|--|--|
| PRESET LABEL | Identifies preset. |
| ZONE LABEL | Identifies zone. |
| ZOOM | Identifies the amount of magnification. |
| AZIMUTH ¹ /ELEVATION ² | Amount of pan from 0° and the amount of tilt from 0° horizontal. |
| DIRECTION | Displays compass direction. |
| ALARM MESSAGE | Displays activated alarm. |
| DATE/TIME | Displays current date and time. |

A preset label is displayed when a preset is called. A zone label is displayed when the system moves into a zone. The zoom ratio label is displayed when zoom is activated. Azimuth/elevation and direction labels are displayed when pan/tilt is activated. An alarm message appears on the monitor when an alarm occurs.

The following settings are available for each label except date and time:

| | |
|------------|---|
| OFF | Label is not displayed when activated. |
| CONSTANT | The label is continually displayed when activated. |
| 2 SECONDS | The label is displayed for 2 seconds after activation. |
| 5 SECONDS | The label is displayed for 5 seconds after activation. |
| 10 SECONDS | The label is displayed for 10 seconds after activation. |

The settings for date and time are ON or OFF.

¹ Azimuth is the pan angle from 0° to 359°.
² Elevation is the tilt position from 0° (horizon) to -90°.
* This setting applies only to Pressurized Spectra IV dome systems.

LABEL POSITIONS

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DISPLAY SETUP

PRESET LABEL

ZONE LABEL

ZOOM

AZIMUTH/ELEVATION

DIRECTION

ALARM MESSAGE

DATE/TIME

<LABEL POSITIONS>

RESTORE FACTORY DEFAULTS

BACK

EXIT



LABEL POSITION

[ZONE LABEL-----]

[PRESET LABEL-----]

[ALARM 1-----]

[ALERT MESSAGE-----]*

<TITLE TEXT>

SAVE AND EXIT

CANCEL AND EXIT

HELP

XXX./-XXX.

NE

XXX.XX

XX/XX/YYYY 00:00

Labels can be placed anywhere on the monitor. This feature allows you to customize the appearance of your monitor screen.

The following labels are not set at fixed positions:

- PRESET LABEL
- ZONE LABEL
- ALARM 1
- ZOOM RATIO - XXX.XX
- AZIMUTH¹/ELEVATION² - XXX°/-XX°
- DIRECTION - NE
- ALERT MESSAGE³*
- TITLE TEXT

To set a label position:

1. Use the joystick to position the cursor beside a label.
2. Press Iris Open.
3. Use the joystick to move the label up, down, left, and/or right.
4. Press Iris Open.
5. Repeat steps 1 through 4 to position other labels.
6. Position the cursor next to Save and Exit. Press Iris Open to save settings and exit menu.

¹ Azimuth is the pan angle from 0° to 359°.

² Elevation is the tilt position from 0° (horizon) to -90°.

³ The alert message is the warning displayed on the monitor if pressure, temperature, or dew point inside the dome reach unacceptable levels.

* This setting applies only to Pressurized Spectra IV dome systems.

Dome Settings

CAMERA

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOMES SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT

TYPE OF LIGHTING

(Does not apply to 16X or 23X models.)

Pelco has calibrated settings that optimize the white balance and the picture for indoor and outdoor lighting conditions. There are two settings:

OUTDOOR (default)

INDOOR

AUTO FOCUS

Auto focus allows the lens to remain in focus during zoom-in, zoom-out, and motion functions.

There are two auto focus settings:

ON (default) If auto focus mode is set to ON, the camera will focus automatically when using pan, tilt, and zoom functions.

OFF Focus is operated manually. To focus, press the Focus Far or Focus Near button on the controller.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT

ZOOM LIMIT

Zoom limit allows the user to define a limitation on the amount of telephoto zoom. The settings vary depending on camera model.

16X (Models DD4TC16 and DD4TC16-X)

The default setting is 32X. Cameras with 128X zoom (16X optical zoom and 8X digital zoom) can be set for 16X, 32X, 64X, or 128X.

22X (Models DD4M22, DD4M22-X, DD4C22, and DD4C22-X)

The default setting is 32X. Cameras with 264X zoom (22X optical zoom and 12X digital zoom) can be set for 22X, 32X, 88X, 176X, 220X, or 264X.

23X (Models DD4CBW23 and DD4CBW23-X)

The default setting is 32X. Cameras with 276X zoom (23X optical zoom and 12X digital zoom) can be set for 23X, 32X, 92X, 184X, 230X, 276X.

35X (Models DD4CBW35 and DD4CBW35-X)

The default setting is 70X. Cameras with 420X zoom (35X optical zoom and 12X digital zoom) can be set for 35X, 70X, 140X, 280X, 350X, or 420X.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE<SYSTEM INFORMATION><DISPLAY SETUP><DOME SETTINGS>ACK ALERT*RESET CAMERACYCLE CAMERA POWERREBOOT SYSTEMEXIT



DOME SETTINGS

<CAMERA><MOTION><POWER UP><LINE SYNC><PRESETS><PATTERNS><ZONES><WINDOW BLANKING><ALARMS><AUX><TITLE TEXT><ALERT>*<CLEAR><PASSWORD><CLOCK><EVENT>BACKEXIT



CAMERA

TYPE OF LIGHTINGAUTO FOCUSZOOM LIMITZOOM SPEEDLOW LIGHT LIMITIR CUT FILTERAUTO IR LEVEL<ADVANCED SETTINGS>BACKEXIT

ZOOM SPEED

Zoom speed allows the user to define how fast the dome will go from full wide zoom to the 16X, 22X, 23X, or 35X optical zoom.

Available zoom speed settings for 16X models include the following:

| | |
|------------------|-------------|
| HIGH | 1.9 seconds |
| MEDIUM (default) | 3.6 seconds |
| LOW | 6.0 seconds |

Available zoom speed settings for 23X models include the following:

| | |
|------------------|-------------|
| HIGH | 2.9 seconds |
| MEDIUM (default) | 4.2 seconds |
| LOW | 5.8 seconds |

Available zoom speed settings for 22X models include the following:

| | |
|------------------|-------------|
| HIGH | 2.4 seconds |
| MEDIUM (default) | 3.9 seconds |
| LOW | 6.3 seconds |

Available zoom speed settings for 35X models include the following:

| | |
|------------------|-------------|
| HIGH | 3.2 seconds |
| MEDIUM (default) | 4.6 seconds |
| LOW | 6.6 seconds |

NOTE: When using the HIGH setting, the image may be out of focus until zooming stops.

LOW LIGHT LIMIT

Low light limit is the maximum duration, in fractions of a second, that the electronic shutter will remain open in low light conditions. The default setting is 2.

Settings include the following:

| | | |
|----------------|------------------|------------------|
| 2 = 1/2 second | 8 = 1/8 second | 30 = 1/30 second |
| 4 = 1/4 second | 15 = 1/15 second | 60 = 1/60 second |

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT

IR CUT FILTER

(Applies only to 23X and 35X models.)

The 23X and 35X cameras have two modes of operation: color, and black-white. You can increase sensitivity in low light conditions by switching to black-white mode (removing the IR cut filter). Color mode is preferred in normal lighting conditions.

The following are the settings for the IR cut filter:

OFF Manual operation is controlled by preset 88 (filter IN) and 89 (filter OUT).
AUTO (default) Automatic operation is controlled by the auto IR level setting.

Auto IR Level

The auto IR level is the light level at which the infrared filter switches IN or OUT.

Following are the available settings for the auto IR level:

DUSK (default) approximately 6 lux (black-white)
 approximately 13 lux (color)


DARK approximately 0.1 lux (black-white)
 approximately 2 lux (color)

NOTES:

- If backlight compensation is ON and the IR cut filter switches OUT in normal lighting conditions, adjust the Auto IR Level to a darker setting. Refer to the *Backlight Compensation (BLC)* section.
- *Low light* does not mean *no light*. Some type of illumination is required (street light, IR light, etc.). The camera is not sensitive to IR light when the IR cut filter is IN.

* This setting applies only to Pressurized Spectra IV dome systems.

ADVANCED CAMERA SETTINGS

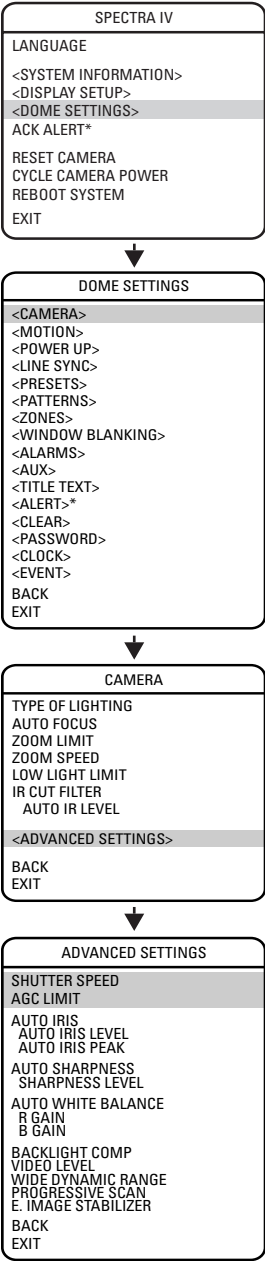

SHUTTER SPEED

Shutter speed is the duration of the electronic shutter. Program shutter speed to operate automatically (Auto) or manually (Numeric Value).

- AUTO (default)

The electronic shutter speed is set automatically by the amount of light sensed by the camera.
- NUMERIC VALUE

Spectra IV/Spectra IV SE dome systems have several numerical shutter speed settings. The higher the number, the faster the electronic shutter.

The slowest shutter speed setting is 2 = 1/2 second

The fastest setting is 30,000 = 1/30,000 second

Increasing the shutter speed lowers the light sensitivity and reduces the streaking of fast moving objects.

NOTE: Set the shutter speed to 100 if you are using an NTSC camera in a 50 Hz environment. This will eliminate any flicker that may occur in the picture.

AGC LIMIT

AGC limit allows users to adjust how the system balances AGC (automatic gain control) and electronic shutter in low light conditions. As scene lighting decreases, the system will automatically adjust, adding a mixture of AGC and slow shutter according to the AGC limit setting. AGC limit can be set between 0 and 40, with 40 applying maximum AGC before slow shutter. In contrast, setting AGC limit to 0 will force the system software to apply maximum slow shutter (as defined by the low light limit setting) before any AGC is applied. The default AGC settings vary depending on camera model.

NOTE: The maximum slow shutter that the system will achieve is 1/2 second shutter (refer to the *Low Light Limit* section).

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT



ADVANCED SETTINGS

SHUTTER SPEED

AGC LIMIT

AUTO IRIS

AUTO IRIS LEVEL

AUTO IRIS PEAK

AUTO SHARPNESS

SHARPNESS LEVEL

AUTO WHITE BALANCE

R GAIN

B GAIN

BACKLIGHT COMP

VIDEO LEVEL

WIDE DYNAMIC RANGE

PROGRESSIVE SCAN

E. IMAGE STABILIZER

BACK

EXIT

AUTO IRIS

Auto iris is the lens function that automatically opens and closes the iris in response to changing light conditions.

Program the auto iris to operate automatically or at a user-defined level.

OFF Auto iris is disabled, and control is always manual.

AUTO (default) The iris is adjusted automatically to produce a constant video output as determined by the auto iris level setting.

NOTE: If auto iris is in the auto mode, it will remain that way until the iris is manually opened or closed. The dome will return to auto mode when it is panned or tilted more than 15 degrees.

Auto Iris Level

Auto iris level is the numeric value the auto iris uses to maintain the brightness level of the camera. Increase the value to brighten the scene. Decrease the level to darken the scene. This setting can be adjusted if the video level in the auto iris mode is too bright or too dark.

NOTE: If backlight compensation is ON, decrease the auto iris level setting.

Auto Iris Peak

Increasing the peak value will cause the auto iris circuit to react more to highlights or “peaks” in the picture. Decreasing this value will cause it to use the average video level to adjust the iris.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT



ADVANCED SETTINGS

SHUTTER SPEED

AGC LIMIT

AUTO IRIS

AUTO IRIS LEVEL

AUTO IRIS PEAK

AUTO SHARPNESS

SHARPNESS LEVEL

AUTO WHITE BALANCE

R GAIN

B GAIN

BACKLIGHT COMP

VIDEO LEVEL

WIDE DYNAMIC RANGE

PROGRESSIVE SCAN

E. IMAGE STABILIZER

BACK

EXIT

AUTO SHARPNESS

Auto sharpness enhances picture detail by increasing the aperture gain of the camera and sharpening the edges in the picture.

There are two settings:

- ON (default) The camera automatically maintains a normal sharpness mode.
- OFF The sharpness of the picture is set manually by programming the sharpness level. Sharpness level settings range from 0-63.

AUTO WHITE BALANCE

(Does not apply to 22X black-white models.)

This feature automatically processes the viewed image to retain color balance over a color temperature range. The default setting for auto white balance is ON.

- R GAIN Adjusts the picture output in the red range. As you change the value, you will see the color change on your monitor.
- B GAIN Adjusts the picture output in the blue range. As you change the value, you will see the color change on your monitor.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT



ADVANCED SETTINGS

SHUTTER SPEED

AGC LIMIT

AUTO IRIS

AUTO IRIS LEVEL

AUTO IRIS PEAK

AUTO SHARPNESS

SHARPNESS LEVEL

AUTO WHITE BALANCE

R GAIN

B GAIN

BACKLIGHT COMP

VIDEO LEVEL

WIDE DYNAMIC RANGE

PROGRESSIVE SCAN

E. IMAGE STABILIZER

BACK

EXIT

BACKLIGHT COMPENSATION (BLC)

If a bright backlight is present, the subjects in the picture may appear dark or as a silhouette. Backlight compensation enhances objects in the center of the picture. The dome uses the center of the picture to adjust the iris. If there is a bright light source outside of this area, it will wash out to white. The camera will adjust the iris so that the object in the sensitive area is properly exposed.

There are two backlight compensation settings:

ON Backlight compensation is activated.

OFF (default) Backlight compensation is not activated.

NOTE: If backlight compensation is ON, decrease the auto iris level setting and adjust the auto IR level to a darker setting. Refer to the *Auto Iris Level* and *Auto IR Level* sections.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT

DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT

CAMERA

TYPE OF LIGHTING
AUTO FOCUS
ZOOM LIMIT
ZOOM SPEED
LOW LIGHT LIMIT
IR CUT FILTER
AUTO IR LEVEL
<ADVANCED SETTINGS>
BACK
EXIT

ADVANCED SETTINGS

SHUTTER SPEED
AGC LIMIT
AUTO IRIS
AUTO IRIS LEVEL
AUTO IRIS PEAK
AUTO SHARPNESS
SHARPNESS LEVEL
AUTO WHITE BALANCE
R GAIN
B GAIN
BACKLIGHT COMP
VIDEO LEVEL
WIDE DYNAMIC RANGE
PROGRESSIVE SCAN
E. IMAGE STABILIZER
BACK
EXIT

VIDEO LEVEL

Set the video output to one of the following:

| | |
|------------------------|--|
| NORMAL | 1.0 volt peak-to-peak |
| HIGH (default setting) | 1.2 volt peak-to-peak to compensate for losses in video cable. |

WIDE DYNAMIC RANGE

(Applies only to 23X and 35X models.)

Wide dynamic range (WDR) balances the brightest and darkest sections of a scene to produce a picture that is better balanced in lighting and provides more detail. For 23X models, the range from the darkest to the brightest sections of the scene is 80X more when WDR is ON than when OFF. For 35X models, the range from the darkest to the brightest sections of the scene is 128X more when WDR is ON than when OFF.

Available settings are OFF and ON. The default setting is OFF. When wide dynamic range is set to ON the frame rate is reduced from the standard 30 frames per second to 15 frames per second.

NOTE: Wide dynamic range is disabled when electronic image stabilization is set to 5 Hz or 10 Hz.



Wide Dynamic Range ON



Wide Dynamic Range OFF

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOMESTTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CAMERA

TYPE OF LIGHTING

AUTO FOCUS

ZOOM LIMIT

ZOOM SPEED

LOW LIGHT LIMIT

IR CUT FILTER

AUTO IR LEVEL

<ADVANCED SETTINGS>

BACK

EXIT



ADVANCED SETTINGS

SHUTTER SPEED

AGC LIMIT

AUTO IRIS

AUTO IRIS LEVEL

AUTO IRIS PEAK

AUTO SHARPNESS

SHARPNESS LEVEL

AUTO WHITE BALANCE

R GAIN

B GAIN

BACKLIGHT COMP

VIDEO LEVEL

WIDE DYNAMIC RANGE

E. IMAGE STABILIZER

BACK

EXIT

ELECTRONIC IMAGE STABILIZATION

(Applies only to 35X models.)

Electronic image stabilization is a feature of the camera that can compensate for some forms of external influences. In all cases, care should be taken to make sure that any dome system is mounted to a rigid location.

In the event that vibration is introduced to the dome system, a user can select one of the electronic image stabilization settings in the menu. The available settings are OFF, 5 Hz, and 10 Hz. Users should apply each of the settings to the camera to see which one best addresses the vibration that is affecting the video quality.

Electronic image stabilization will not correct for all ranges of vibration. If either of the settings fails to eliminate the vibration seen in the video, other measures should be taken to isolate the vibration or to seek a more rigid mounting location.

NOTES:

- When electronic image stabilization is applied, digital slow shutter and wide dynamic range are disabled. Zoom, image resolution, and viewing angle are also limited when this feature is activated.
- Electronic image stabilization cannot be used while in a preset that has motion detection activated.

* This setting applies only to Pressurized Spectra IV dome systems.

MOTION SETTINGS

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



MOTION

AUTO FLIP

PROPORTIONAL PAN

PARK TIME (MINUTES)

PARK ACTION

SCAN SPEED (DEG/S)

PRESET FREEZE FRAME

LIMIT STOPS

<SET MANUAL STOPS>

<CLEAR MANUAL STOPS>

<SET SCAN STOPS>

<CLEAR SCAN STOPS>

<SET AZIMUTH ZERO>

<CLEAR AZIMUTH ZERO>

BACK

EXIT

REFERENCE INFORMATION

MANUAL LIMITS SET

SCAN LIMITS SET

AUTO FLIP

When the camera tilts downward and goes just beyond the vertical position, the dome rotates 180 degrees. When the dome rotates (flips), the camera starts moving upward as long as you continue to hold the joystick in the down position. Once you let go of the joystick after the dome rotates, joystick control returns to normal operation. The auto-flip feature is useful for following a person who passes directly beneath the dome.

There are two auto flip modes:

- ON (default) Auto flip mode is enabled.
- OFF Auto flip mode is disabled.

PROPORTIONAL PAN

Proportional pan automatically reduces or increases the pan and tilt speeds in proportion to the amount of zoom. At telephoto zoom settings, the pan and tilt speeds will be slower for a given amount of joystick deflection than at wide zoom settings. This keeps the image from moving too fast on the monitor when there is a large amount of zoom.

There are two proportional pan modes:

- ON (default) Enables the proportional pan mode.
- OFF Disables proportional pan mode. The pan speed will not depend on the amount of zoom.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE<SYSTEM INFORMATION><DISPLAY SETUP><DOMES SETTINGS>ACK ALERT*RESET CAMERACYCLE CAMERA POWERREBOOT SYSTEMEXIT



DOMES SETTINGS

<CAMERA><MOTION><POWER UP><LINE SYNC><PRESETS><PATTERNS><ZONES><WINDOW BLANKING><ALARMS><AUX><TITLE TEXT><ALERT>*<CLEAR><PASSWORD><CLOCK><EVENT>BACKEXIT



MOTION

AUTO FLIPPROPORTIONAL PANPARK TIME (MINUTES)PARK ACTIONSCAN SPEED (DEG/S)PRESET FREEZE FRAMELIMIT STOPSS<SET MANUAL STOPS><CLEAR MANUAL STOPS><SET SCAN STOPS><CLEAR SCAN STOPS><SET AZIMUTH ZERO><CLEAR AZIMUTH ZERO>BACKEXITREFERENCE INFORMATIONMANUAL LIMITS SETSCAN LIMITS SET

PARK TIME

This feature allows the dome to begin a specified operation (scan, preset, or pattern) after a programmed time of inactivity.

Park time can be programmed from 1 minute to 720 minutes (12 hours), or set to zero, which disables this feature. The default setting is zero.

Park Action

This feature will define the activity when the dome parks. The following settings are available:

- NONE (default)No action.
- AUTO SCANDome starts auto scan operation.
- RANDOM SCANDome starts random scan operation.
- FRAME SCANDome starts frame scan operation.
- PRESET 1Dome goes to preset 1.
- PRESET 8Dome goes to preset 8.
- PATTERN 1Dome runs pattern 1.
- PATTERN 2Dome runs pattern 2.
- PATTERN 3Dome runs pattern 3.
- PATTERN 4Dome runs pattern 4.
- PATTERN 5Dome runs pattern 5.
- PATTERN 6Dome runs pattern 6.
- PATTERN 7Dome runs pattern 7.
- PATTERN 8Dome runs pattern 8.

(Only 22X and 35X models allow PATTERN 2 through PATTERN 8.)

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



MOTION

AUTO FLIP

PROPORTIONAL PAN

PARK TIME (MINUTES)

PARK ACTION

SCAN SPEED (DEG/S)

PRESET FREEZE FRAME

LIMIT STOPS

<SET MANUAL STOPS>

<CLEAR MANUAL STOPS>

<SET SCAN STOPS>

<CLEAR SCAN STOPS>

<SET AZIMUTH ZERO>

<CLEAR AZIMUTH ZERO>

BACK

EXIT

REFERENCE INFORMATION

MANUAL LIMITS SET

SCAN LIMITS SET

SCAN SPEED

Scan speed is the degrees per second that the dome will pan when in a scan mode. Scan speed is adjustable from 1 to 40 degrees per second through the programming menu. The default setting is 25 degrees per second.

PRESET FREEZE FRAME

This feature freezes the scene on the monitor when going to a preset. This allows for smooth transition from one preset scene to another. Preset freeze frame also reduces bandwidth when used with digital network systems such as PelcoNet™ and guarantees that blanked areas will not be revealed when going to a preset.

There are three preset freeze frame settings:

- ON
- The image on the screen freezes when a preset is called. When the dome reaches the preset, the image is unfrozen and the preset scene is displayed.
- OFF
- The image is never frozen.
- AUTO (default)
- Freeze frame is turned on automatically if window blanking is ON. If window blanking is OFF, freeze frame is off.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



MOTION

AUTO FLIP

PROPORTIONAL PAN

PARK TIME (MINUTES)

PARK ACTION

SCAN SPEED (DEG/S)

PRESET FREEZE FRAME

LIMIT STOPS

<SET MANUAL STOPS>

<CLEAR MANUAL STOPS>

<SET SCAN STOPS>

<CLEAR SCAN STOPS>

<SET AZIMUTH ZERO>

<CLEAR AZIMUTH ZERO>

BACK

EXIT

REFERENCE INFORMATION

MANUAL LIMITS SET

SCAN LIMITS SET

LIMIT STOPS

Limit stops are programmable stops that limit the pan range of the dome. There must be two limits, a left and a right, to define an area.

There are two types of limit stops:

MANUAL A manual (joystick) pan operation stops when a limit stop is reached.

SCAN The dome reverses direction during random, frame, or auto scanning when a limit stop is reached.

To set manual or scan stops:

1. Use the joystick to position the cursor beside SET MANUAL STOPS or SET SCAN STOPS.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

NOTE: In order for the manual or scan stops to work, the LIMIT STOPS option must be ON.

To clear manual or scan stops:

1. Use the joystick to position the cursor beside CLEAR MANUAL STOPS or CLEAR SCAN STOPS.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



MOTION

AUTO FLIP

PROPORTIONAL PAN

PARK TIME (MINUTES)

PARK ACTION

SCAN SPEED (DEG/S)

PRESET FREEZE FRAME

LIMIT STOPS

<SET MANUAL STOPS>

<CLEAR MANUAL STOPS>

<SET SCAN STOPS>

<CLEAR SCAN STOPS>

<SET AZIMUTH ZERO>

<CLEAR AZIMUTH ZERO>

BACK

EXIT

REFERENCE INFORMATION

MANUAL LIMITS SET

SCAN LIMITS SET

AZIMUTH ZERO

Azimuth is the pan angle from 0° to 359°. Azimuth zero is the pan position you specify to be the 0° point. Azimuth zero is normally set to magnetic north. Once set, azimuth and compass readings are based on the set Azimuth Zero point.

To program azimuth zero:


1. Use the joystick to position the cursor beside SET AZIMUTH ZERO.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

To clear azimuth zero:

1. Use the joystick to position the cursor beside CLEAR AZIMUTH ZERO.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

* This setting applies only to Pressurized Spectra IV dome systems.

POWER UP

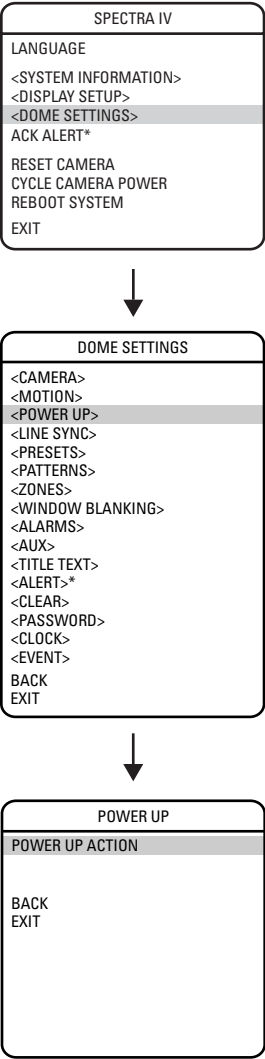

POWER UP ACTION

This setting defines a specific activity (scan, preset, pattern) to be performed in the event the power to the dome is cycled.


The following settings are available:

| | |
|----------------|---|
| NONE | No action. |
| AUTO (default) | The dome resumes its prior activity or direction before the power outage. |
| AUTO SCAN | Dome starts auto scan operation. |
| RANDOM SCAN | Dome starts random scan operation. |
| FRAME SCAN | Dome starts frame scan operation. |
| PRESET 1 | Dome goes to preset 1. |
| PRESET 2 | Dome goes to preset 2. |
| PRESET 3 | Dome goes to preset 3. |
| PRESET 4 | Dome goes to preset 4. |
| PRESET 5 | Dome goes to preset 5. |
| PRESET 6 | Dome goes to preset 6. |
| PRESET 7 | Dome goes to preset 7. |
| PRESET 8 | Dome goes to preset 8. |
| PATTERN 1 | Dome runs pattern 1. |
| PATTERN 2 | Dome runs pattern 2. |
| PATTERN 3 | Dome runs pattern 3. |
| PATTERN 4 | Dome runs pattern 4. |
| PATTERN 5 | Dome runs pattern 5. |
| PATTERN 6 | Dome runs pattern 6. |
| PATTERN 7 | Dome runs pattern 7. |
| PATTERN 8 | Dome runs pattern 8. |

(Only 22X and 35X models allow PATTERN 2 through PATTERN 8.)

* This setting applies only to Pressurized Spectra IV dome systems.

LINE SYNC

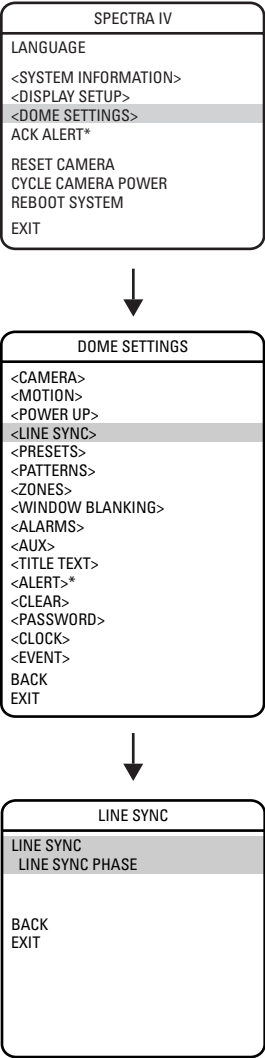

Line sync refers to a programmable function that allows you to synchronize all cameras within a matrix system.

NOTE: Spectra IV and Spectra IV SE dome systems automatically sense V-Sync input. No line sync setup is required for Pelco control systems that provide a V-Sync signal.

For matrix systems that do not output V-Sync, there are two settings for line synchronization:

ON (default) Adjusts the phase of the line sync to synchronize input power. Line sync phase settings range from 0-359 degrees.

OFF The dome synchronizes to the internal clock.

* This setting applies only to Pressurized Spectra IV dome systems.

PRESETS

NOTE: The number of programmable presets available is limited by the model of the back box you are using. If you are using an older model back box, you may not have access to all of the available presets. Refer to the table below for a list of back boxes and the presets available for each.

| Back Box Series | Model | Number of Presets Available | |
|-----------------|-------|-----------------------------|-------------------|
| | | <i>Spectra Lite</i> | <i>Spectra</i> |
| Spectra II™ | BB5A | 32 | 64 |
| | | <i>Spectra</i> | <i>Spectra SE</i> |
| Spectra III | BB53 | 99 | 150 |
| Spectra IV | BB4 | 128 | 256 |

The Spectra IV dome system, which includes 16X and 23X models, has 128 preset positions. The programmable presets are numbered 1-32, 35-82, and 100-150.

The Spectra IV SE dome system, which includes 22X and 35X models, has 256 preset positions. The programmable presets are numbered 1-32, 35-82, and 100-256.

Each of the user-definable presets can be programmed to use pan, tilt, camera settings, and motion detection.

The following presets are predefined for specific functions:

| Preset | Action |
|--------|--|
| 33 | Flip command. Pans the dome drive 180 degrees. |
| 34 | Pan zero command. Directs the dome drive to the factory-determined zero reference point. |
| 83-87 | Reserved. |
| 88 | IR filter IN (color). |
| 89 | IR filter OUT (black-white). |
| 90-91 | Manual limit stops. |
| 92-93 | Scan limit stops. |
| 94 | Reserved. |
| 95 | Select main programming menu. |
| 96 | Stop a scan. |
| 97 | Random scanning. |
| 98 | Frame scanning. |
| 99 | Start auto scanning |

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



PRESETS

PRESET NUMBER
*** PRESET NOT DEFINED *** 1
<EDIT PRESET LABEL>
<EDIT PRESET SCENE>
<EDIT CAMERA SETTINGS>
<MOTION DETECTION>
<EDIT SCHEDULE>
<CLEAR PRESET>
<CLEAR CAMERA SETTINGS>
BACK
EXIT
REFERENCE INFORMATION
AZIMUTH
ELEVATION
ZOOM RATIO
CUSTOM CAMERA SETTINGS

NOTE: For American Dynamics controllers with only 32 presets, switch SW2-1 on the dome drive to the ON position. When SW2-1 is ON, preset

| | |
|---------------|---------------|
| 99 becomes 32 | 92 becomes 25 |
| 98 becomes 31 | 91 becomes 24 |
| 97 becomes 30 | 90 becomes 23 |
| 96 becomes 29 | 89 becomes 22 |
| 95 becomes 28 | 88 becomes 21 |
| 93 becomes 26 | |

If the limit stops are turned off, presets 23-26 can be used as regular presets.

Use the following steps to program a preset.

- Select the preset number:
 - Use the joystick to position the cursor beside PRESET NUMBER. Press Iris Open. The cursor moves to the right.
 - Move the joystick up or down to view selections. Press Iris Open to enter selection.
- Edit the preset label:
 - Use the joystick to position the cursor beside EDIT PRESET LABEL.
 - Press Iris Open. The following appears on the monitor:

LABEL FOR PRESET

PRESET NUMBER -----
1234567890
ABCDEFGHIJ
KLMNOPQRST
UVWXYZ,-/
abcdefghijklmnopqrstuvwxyz
BACKSPACE
OK
CANCEL
SPACE

- Use the joystick to position the cursor beside a character. Press Iris Open to enter selection. To clear a character, position the cursor beside BACKSPACE, and then press Iris Open.
 - When label is completed, move the cursor to OK. Press Iris Open to return to the Preset menu.
- Edit the preset scene:
 - Use the joystick to position the cursor beside EDIT PRESET SCENE.
 - Press Iris Open.
 - Follow the directions displayed on the monitor.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



PRESETS

PRESET NUMBER
*** PRESET NOT DEFINED *** 1
<EDIT PRESET LABEL>
<EDIT PRESET SCENE>
<EDIT CAMERA SETTINGS>
<MOTION DETECTION>
<EDIT SCHEDULE>
<CLEAR PRESET>
<CLEAR CAMERA SETTINGS>
BACK
EXIT
REFERENCE INFORMATION
AZIMUTH -
ELEVATION -
ZOOM RATIO -
CUSTOM CAMERA SETTINGS -

4. Edit preset camera settings:

- Use the joystick to position the cursor beside EDIT CAMERA SETTINGS.
- Press Iris Open. The EDIT CAMERA SETTINGS window appears on the monitor. Refer to the *Camera* and *Advanced Camera Settings* sections of this manual to change preset camera settings.
- To edit the camera settings schedule, use the joystick to position the cursor beside EDIT SCHEDULE. Press Iris Open.

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

NOTES:

- For 23X and 35X models, there are two additional options available for the IR cut filter that are only available when programming a preset. The additional settings are YES and NO. If the IR cut filter is set to YES, the preset scene will be in color. If the IR cut filter is set to NO, the preset scene will be in black-white.
- You can copy camera settings from one preset to another preset. To copy camera settings do the following:
 - Use the joystick to position the cursor beside COPY CAMERA SETTINGS.
 - Press Iris Open. The cursor moves to the right.
 - Move the joystick up or down to view selections. Press Iris Open to enter selection.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOMES SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT

DOMES SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT

PRESETS

PRESET NUMBER
*** PRESET NOT DEFINED ***
<EDIT PRESET LABEL>
<EDIT PRESET SCENE>
<EDIT CAMERA SETTINGS>
<MOTION DETECTION>
<EDIT SCHEDULE>
<CLEAR PRESET>
<CLEAR CAMERA SETTINGS>
BACK
EXIT
REFERENCE INFORMATION
AZIMUTH
ELEVATION
ZOOM RATIO
CUSTOM CAMERA SETTINGS

MOTION DETECTION

MOTION DETECTION ENABLED
<EDIT DETECTION AREAS>
ACTIVATE AUX
AUX TIME (SECS)
BACK
EXIT

ENABLE MOTION DETECTION

(Applies only to 23X and 35X models.)

The following are the settings for motion detection:

OFF (default) Motion detection is turned off (disabled).

ON Motion detection is turned on (enabled).

NOTE: Motion detection does not work if the shutter speed is set at less than 1/60 of a second.

EDIT DETECTION AREAS

- (Applies only to 23X and 35X models.)
- Four motion detection areas can be defined for a preset. Use the following steps to edit motion detection areas.
1. Edit detection areas 1, 2, 3, or 4:
 - a. Use the joystick to position the cursor beside EDIT DETECTION AREAS.
 - b. Press Iris Open. The EDIT DETECTION AREAS programming window appears on the monitor.
 - c. Use the joystick to position the cursor beside LOCATION for DETECTION AREA 1, 2, 3, or 4.
 - d. Press Iris Open. The cursor moves to the right next to the number 0.
 - e. Move the joystick *up*. A blue rectangle appears in the upper left-hand corner of the screen.
 - f. Use the joystick to place the blue rectangle over the desired detection area.
 - g. Press Iris Open to make a selection.
 2. Set the sensitivity of the motion detection area:
 - a. Position the cursor next to SENSITIVITY for DETECTION AREA 1, 2, 3, or 4.
 - b. Press Iris Open, the cursor moves to the right.
 - c. Use the joystick to select one of the following sensitivity levels:

| | |
|------------------|---|
| HIGH | The sensitivity level is high. Slight changes in light level and contrast are detectable. |
| MEDIUM (default) | Average sensitivity. |
| LOW | The sensitivity level is low. |
 - d. Press Iris Open to make selection.

* This setting applies only to Pressurized Spectra IV dome systems.

| EDIT DETECTION AREAS | | |
|----------------------|--------|---|
| DETECTION AREA 1 | | |
| LOCATION | | 0 |
| SENSITIVITY | MEDIUM | |
| DETECTION AREA 2 | | |
| LOCATION | | 0 |
| SENSITIVITY | MEDIUM | |
| DETECTION AREA 3 | | |
| LOCATION | | 0 |
| SENSITIVITY | MEDIUM | |
| DETECTION AREA 4 | | |
| LOCATION | | 0 |
| SENSITIVITY | MEDIUM | |
| BACK | | |
| EXIT | | |



NOTE: Motion detection is not guaranteed to catch 100% of activity.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



PRESETS

PRESET NUMBER

*** PRESET NOT DEFINED ***

<EDIT PRESET LABEL>

<EDIT PRESET SCENE>

<EDIT CAMERA SETTINGS>

<MOTION DETECTION>

<EDIT SCHEDULE>

<CLEAR PRESET>

<CLEAR CAMERA SETTINGS>

BACK

EXIT

REFERENCE INFORMATION

AZIMUTH

ELEVATION

ZOOM RATIO

CUSTOM CAMERA SETTINGS



MOTION DETECTION

MOTION DETECTION ENABLED

<EDIT DETECTION AREAS>

ACTIVATE AUX

AUX TIME (SECS)

BACK

EXIT

ACTIVATE AUX COMMAND

(Applies only to 23X and 35X models.)

Motion detection can be programmed to trigger an auxiliary command when motion is detected. The following are the settings for ACTIVATE AUX:

- OFF (default)
- Motion detection will not trigger an AUX command.
- 1
- Triggers a command to AUX 1.
- 2
- Triggers a command to AUX 2.

AUX TIME

(Applies only to 23X and 35X models.)

Aux time is the length of time the auxiliary will remain on after motion is detected. Available settings for AUX TIME are 1 through 60 seconds.


EDIT SCHEDULE

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

* This setting applies only to Pressurized Spectra IV dome systems.

PATTERNS

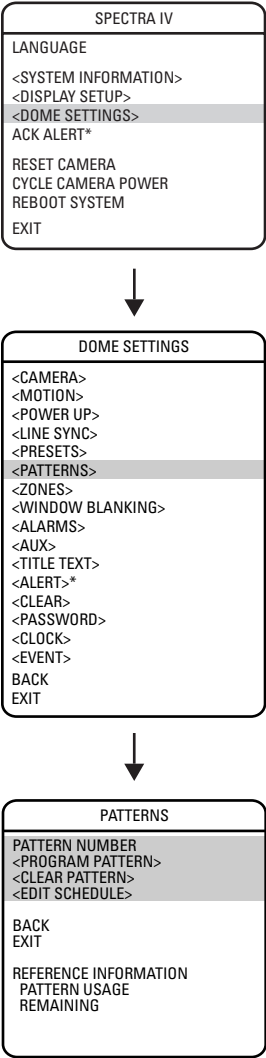

A pattern is a memorized, repeating series of pan, tilt, zoom, and preset functions that can be recalled with a command from a controller or automatically by a programmed function (alarm, park, event, or power-up).

Both 16X and 23X models have one user-defined pattern available. The 22X and 35X models can handle up to eight patterns. Pattern length is based upon memory usage rather than a fixed amount of time. The complexity of a pattern will determine the amount of storage available to program other patterns.

NOTE: In most cases, the memory available will allow for ample time to schedule typical patterns. If the scheduled patterns are unusually lengthy or complex, there is a possibility that there may not be enough remaining memory to program all eight patterns for the 22X and 35X models.

To program a pattern:

1. Use the joystick to position the cursor beside PATTERN NUMBER. Press Iris Open. The cursor moves to the right.
2. Move the joystick up or down to view selections. Press Iris Open to enter selection.
3. Use the joystick to position the cursor beside PROGRAM PATTERN.
4. Press Iris Open. The Patterns programming window appears on the monitor.
5. Follow the directions displayed on the monitor.

After a pattern is programmed, the remaining storage percentage is displayed on the screen. This is the amount of memory available to program the remaining patterns.

To clear a pattern:

1. Use the joystick to position the cursor beside CLEAR PATTERN.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

To edit the pattern schedule:

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

NOTE: When programming one or more presets within a pattern, use the normal controller commands to Call a Preset. Not all controllers can start all patterns. However, any of the patterns can be automatically started with park, power-up, event, and alarm functions.

* This setting applies only to Pressurized Spectra IV dome systems.

ZONES

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



ZONES

ZONE NUMBER

*** ZONE NOT DEFINED ***

<EDIT ZONE LABEL>

<EDIT ZONE>

ZONE ENABLED

ZONE BLANKING

<CLEAR ZONE>

BACK

EXIT

A zone is a pan area, defined by a left and right limit, on the 360-degree pan plane. The Spectra 4 and Spectra IV SE dome systems are capable of eight zones, each with a 20-character label.

To program a zone:

1. Use the joystick to position the cursor beside ZONE NUMBER. Press Iris Open, and the cursor moves to the right.
2. Move the joystick up or down to view selections. Press Iris Open to enter selection.
3. Use the joystick to position the cursor beside EDIT ZONE.
4. Press Iris Open. The Zone programming window appears on the monitor.
5. Follow the directions displayed on the monitor. After the left and right limit stops are set, the Zones menu reappears with the ZONE ENABLED option set to YES.

To edit a zone label:

1. Use the joystick to position the cursor beside EDIT ZONE LABEL.
2. Press Iris Open. The following appears on the monitor:

LABEL FOR ZONE

ZONE NUMBER - - - - -

1234567890

ABCDEFGHIJ

KLMNOPQRST

UVWXYZ,./

abcdefghijklmnopqrstuvwxyz

klmnopqrst

uvwxyz*,:;

OK

CANCEL

SPACE

BACKSPACE

3. Use the joystick to position the cursor beside a character. Press Iris Open to enter selection. To clear a character, position the cursor beside BACKSPACE, and then press Iris Open.
4. When the label is completed, move the cursor to OK. Press Iris Open to return to the Zones menu.

To disable a zone (a zone is enabled automatically when it is programmed) or to blank a zone:

1. Move the cursor beside ZONE ENABLED or ZONE BLANKING.
2. Press Iris Open. The cursor moves to the right.
3. Move the joystick up or down to view selections. Press Iris Open to enter selection.

To clear a zone:

1. Use the joystick to position the cursor beside CLEAR ZONE.
2. Press Iris Open. Follow the instructions on the screen.

* This setting applies only to Pressurized Spectra IV dome systems.

WINDOW BLANKING

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



WINDOW BLANKING

STYLE

BLANK ALL ABOVE

BLANK ALL BELOW

<SET WINDOWS>

BACK

EXIT



SET WINDOWS

WINDOW NUMBER

<EDIT WINDOW LOCATION>

<EDIT WINDOW ZOOM>

<EDIT SCHEDULE>

ENABLE WINDOW

REVERSE

CLEAR WINDOW

BACK

EXIT

Window blanking allows a user to program four-sided areas that cannot be viewed by the operator of the dome system. A blanked area will move with pan and tilt functions and automatically adjust in size as the lens zooms telephoto and wide.

The 16X and 23X models have one user-defined window blank available. The 22X and 35X models have eight available user-defined window blanks.


Spectra IV and Spectra IV SE dome systems have two styles of window blanking: Gray and Smear. If the style is set to Gray, the blanked area is covered with a solid gray window. If Smear is selected images behind the window will be noticeable but not distinguishable.

To set a window blanking area:

1. Use the joystick to position the cursor beside WINDOW BLANKING. Press Iris Open. The WINDOW BLANKING menu appears on the screen.
2. Move the joystick to position the cursor beside SET WINDOWS. Press Iris Open to enter.
3. Position the cursor beside WINDOW NUMBER. Press Iris Open. The cursor moves to the right.
4. Move the joystick up or down to view selections. Press Iris Open to enter selection.
5. Use the joystick to position the cursor beside EDIT WINDOW LOCATION. Press Iris Open, and then follow the instructions that appear on the screen. When all four corners are set, the SET WINDOWS menu reappears, the blanked area is displayed, and the ENABLE WINDOW option is set to YES.

NOTES:

- Use the inside corner of the window selection tool as a guide when selecting the upper left, upper right, bottom right, and bottom left corners of the window.
- Set windows are not visible when editing a new window location.



* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



WINDOW BLANKING

STYLE

BLANK ALL ABOVE
BLANK ALL BELOW

<SET WINDOWS>

BACK
EXIT



SET WINDOWS

WINDOW NUMBER

<EDIT WINDOW LOCATION>
<EDIT WINDOW ZOOM>
<EDIT SCHEDULE>

ENABLE WINDOW
REVERSE
CLEAR WINDOW

BACK
EXIT

6. The blanked area can be programmed to turn on or off at a specified zoom point. To set the zoom point:
 - a. Use the joystick to position the cursor beside EDIT WINDOW ZOOM, and then press Iris Open.
 - b. Zoom in to the point where you want window blanking to turn on. Press Iris Open to set the zoom point.

NOTES:

- Since the area is already blanked out, it may be difficult to determine when you want window blanking to turn on. Reverse the window before setting the zoom point. When finished reverse the window again to blank out the area.
- Increase the size of the window if any part of the blanked area is revealed during pan, tilt, and zoom operations.



Window Blanking Disabled



Window Blanking Enabled

EDIT SCHEDULE

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

REVERSE

A blanked out area can be reversed to make it visible and the areas on both sides of it not visible. The areas above and below the blanking area remain visible. Reversing the window a second time will return it to its original condition.

CLEAR WINDOW

All areas that have been set for window blanking are cleared.

* This setting applies only to Pressurized Spectra IV dome systems.

BLANK ALL ABOVE/BLANK ALL BELOW

The Blank All Above and Blank All Below options add additional flexibility to setting up privacy areas. These settings are ideal for applications where a complete pan location needs to be blanked.

Blank All Above


Blanks everything above a user-defined tilt angle. A blanked band will appear at the top of the screen. The following settings are available:

- OFF (default) - No blanking
- 0 - Blanks area from horizon to 3° above horizon
- 10 - Blanks area from 3° above horizon to 10° below horizon
- 20 - Blanks area from 3° above horizon to 20° below horizon
- 30 - Blanks area from 3° above horizon to 30° below horizon
- 40 - Blanks area from 3° above horizon to 40° below horizon
- 50 - Blanks area from 3° above horizon to 50° below horizon
- 60 - Blanks area from 3° above horizon to 60° below horizon
- 70 - Blanks area from 3° above horizon to 70° below horizon
- 80 - Blanks area from 3° above horizon to 80° below horizon

Blank All Below

Blanks everything below a user-defined tilt angle. A blanked circle will appear below the specified angle. The following settings are available:

- OFF (default) - No blanking
- 0 - Blanks area from horizon to 92° below horizon
- 10 - Blanks area from 10° to 92° below horizon
- 20 - Blanks area from 20° to 92° below horizon
- 30 - Blanks area from 30° to 92° below horizon
- 40 - Blanks area from 40° to 92° below horizon
- 50 - Blanks area from 50° to 92° below horizon
- 60 - Blanks area from 60° to 92° below horizon
- 70 - Blanks area from 70° to 92° below horizon
- 80 - Blanks area from 80° to 92° below horizon

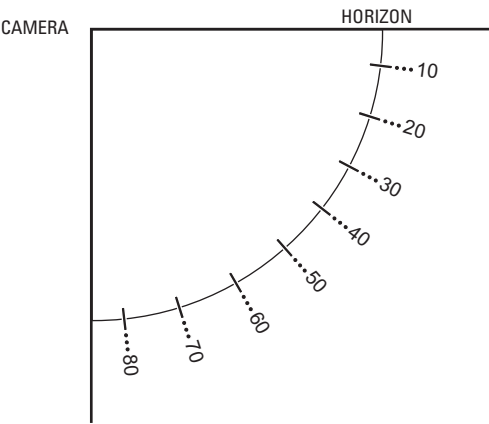

ALARMS

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOMES SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



ALARMS

RESUME

SEQUENCE (SECS)

RESET DELAY (SECS)

<ALARM SETTINGS>

BACK

EXIT



ALARM SETTINGS

ALARM NUMBER

ALARM PRIORITY

ALARM ACTION

ACTIVATE AUX

ALARM CONTACT

<EDIT SCHEDULE>

BACK

EXIT

The Spectra IV SE dome systems have seven alarm inputs that can be programmed as high, medium, or low priority. When an alarm is received, an input signal to the dome triggers the user-defined action (go to preset, run pattern, etc.) programmed for the alarm.

NOTE: Refer to the notation in step 6 for the limited alarm features available for 16X and 23X models.

There are three global alarm settings:

- RESUME

This mode lets the dome resume its previous activity (scan, pattern, or previous position) after all alarms are cleared.
- SEQUENCE

This is the time the dome will perform an alarm activity when more than one alarm of the same priority occurs at the same time.
- RESET DELAY

This is the amount of time the dome considers the alarm to be active after it has physically cleared.

Use the following steps to program alarm settings.

1. Use the joystick to position the cursor beside ALARM SETTINGS. Press Iris Open.
2. Select the alarm number:

a. Use the joystick to position the cursor beside ALARM NUMBER.

b. Press Iris Open. The cursor moves to the right.

c. Move the joystick up or down to view selections. Press Iris Open to enter selection.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



ALARMS

RESUME
SEQUENCE (SECS)
RESET DELAY (SECS)
<ALARM SETTINGS>
BACK
EXIT



ALARM SETTINGS

ALARM NUMBER
ALARM PRIORITY
ALARM ACTION
ACTIVATE AUX
ALARM CONTACT
<EDIT SCHEDULE>
BACK
EXIT

3. Select the alarm priority:

- Use the joystick to position the cursor beside ALARM PRIORITY.
- Press Iris Open. The cursor moves to the right.
- Move the joystick up or down to view the available selections. Available settings include HIGH, MEDIUM, and LOW (default). If multiple alarms with different priorities are active at the same time, the dome will only go to the alarms with the highest priority.
- Press Iris Open to enter selection.

| | |
|------------|---|
| HIGH | Alarm action takes highest priority and will override manual pan, tilt, and zoom control. |
| MEDIUM/LOW | Alarm action will not occur if an alarm occurs during manual pan, tilt, and zoom control. |

4. Set the alarm action:

- Use the joystick to position the cursor beside ALARM ACTION.
- Press Iris Open. The cursor moves to the right.
- Move the joystick up or down to view the available selections. The following are the settings for alarm action:

| | |
|-------------|--|
| NONE | No action when alarm is triggered. |
| PRESET | Dome goes to the preset that is the same as the alarm number. Preset 1 will go to Alarm 1. |
| PATTERN 1 | Dome runs pattern 1 when alarm is triggered. |
| PATTERN 2 | Dome runs pattern 2 when alarm is triggered. |
| PATTERN 3 | Dome runs pattern 3 when alarm is triggered. |
| PATTERN 4 | Dome runs pattern 4 when alarm is triggered. |
| PATTERN 5 | Dome runs pattern 5 when alarm is triggered. |
| PATTERN 6 | Dome runs pattern 6 when alarm is triggered. |
| PATTERN 7 | Dome runs pattern 7 when alarm is triggered. |
| PATTERN 8 | Dome runs pattern 8 when alarm is triggered. |
| AUTO SCAN | Dome starts auto scan operation when alarm is triggered. |
| RANDOM SCAN | Dome starts random scan operation when alarm is triggered. |
| FRAME SCAN | Dome starts frame scan operation when alarm is triggered. |

- Press Iris Open to enter selection.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



ALARMS

RESUME
SEQUENCE (SECS)
RESET DELAY (SECS)
<ALARM SETTINGS>
BACK
EXIT



ALARM SETTINGS

ALARM NUMBER
ALARM PRIORITY
ALARM ACTION
ACTIVATE AUX
ALARM CONTACT
<EDIT SCHEDULE>
BACK
EXIT

5. Set the auxiliary to activate:

- Use the joystick to position the cursor beside ACTIVATE AUX.
- Press Iris Open. The cursor moves to the right.
- Move the joystick up or down to view the following available selections.

| | |
|--------------|-----------------------------------|
| NO (default) | Not activated. |
| 1 | An alarm action will close AUX 1. |
| 2 | An alarm action will close AUX 2. |

- Press Iris Open to enter selection.

NOTE: The AUX 1/AUX2 will stop when all the alarms assigned to it have cleared. If the AUX1/AUX is set up as momentary, then it will be activated each time a new alarm is activated.

6. Set the alarm contact:

- Use the joystick to position the cursor beside ALARM CONTACT.
- Press Iris Open. The cursor moves to the right.
- Move the joystick up or down to view the following available selections.

| | |
|---------------|-----------------|
| N/O (default) | Normally open |
| N/C | Normally closed |

- Press Iris Open to enter selection.

NOTE: The alarm contact feature is functional and available for 16X and 23X models only if the dome drive is installed in a Spectra III SE or Spectra IV SE back box.

7. To edit the alarm schedule:

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

* This setting applies only to Pressurized Spectra IV dome systems.

AUX

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



AUX

AUX 1 MODE

DWELL TIME (SECS)

AUX 2 MODE

DWELL TIME (SECS)

<EDIT SCHEDULE>

BACK

EXIT

NOTE: The auxiliary feature is functional and available for 16X and 23X models only if the dome drive is installed in a Spectra III SE or Spectra IV SE back box.

An auxiliary output is a programmable signal from the dome back box that can trigger another device to operate. An auxiliary output is programmable to trigger from an alarm or from a controller.

An AUX 1 command from the controller will activate the relay in the dome and operate the device that is connected to the relay. The output of AUX 1 can be connected to the alarm input of a system switch to activate automatic monitor switching and recording.

An AUX 2 command from the controller will place a ground at the output of AUX 2 to operate the device that is connected to it.

The following are the available aux mode settings:

- TOGGLE (default) Changes the state of the auxiliary output every time an AUX command is received from the controller.
- LATCHING Must receive an AUX ON/AUX OFF command from the controller to turn the auxiliary output on/off.
- MOMENTARY An AUX ON command from the controller turns the auxiliary output on for the programmed DWELL TIME. The auxiliary output will automatically turn off when the dwell time is finished.

EDIT SCHEDULE

The Edit Schedule menu is a duplicate of the Edit Event menu in the *Event* section with the following exceptions. In the Edit Schedule menu, the event type cannot be changed. Also, the Holiday feature cannot be accessed from the Edit Schedule menu.

For instructions on changing the features in the Edit Schedule menu, refer to the Edit Event menu in the *Event* section.

* This setting applies only to Pressurized Spectra IV dome systems.

TITLE TEXT

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



TITLE TEXT

ENABLE TITLE TEXT

<EDIT TITLE TEXT>

BACK

EXIT

Title text is the label used to identify the camera viewed on the monitor. Up to 20 characters can be used for a title.

To edit the title text label, do the following:

1. Use the joystick to position the cursor beside EDIT TITLE TEXT.
2. Press Iris Open. The following appears on the monitor:

EDIT TITLE TEXT

1234567890

ABCDEFGHIJ

KLMNOPQRST

UVWXY,-./

abcdefghijklmnopqrstuvwxyz

OK

CANCEL

SPACE

BACKSPACE

3. Use the joystick to position the cursor beside a character. Press Iris Open to select the character. To clear a character, position the cursor beside BACKSPACE and then press Iris Open.
4. When the title is completed, move the cursor to OK. Press Iris Open to return to the Title Text menu.
5. Enable the title text label by doing the following:
 - a. Move the cursor beside ENABLE TITLE TEXT.
 - b. Press Iris Open. The cursor moves to the right.
 - c. Move the joystick up or down to view the selections. Select ON and then press Iris Open to enable the title text.

* This setting applies only to Pressurized Spectra IV dome systems.

ALERT

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



ALERT

REPEAT

ACK ACTION

ACTIVATE AUX

<CURRENT READING>

RESET ALERT

BACK

EXIT

NOTE: The Alert option applies only to Pressurized Spectra IV dome systems. Spectra 4 systems that are not pressurized will not display this menu item.

Sensors strategically placed inside the pressurized dome system continually monitor pressure, temperature, and dew point. If internal conditions reach unacceptable levels, an alert message appears on the screen describing the alert condition. Example: If pressure drops below 1 psig, “LOW PRESSURE” is displayed on the monitor.

The following system conditions will trigger an alert message:

System Condition

- Temperature is above 140°F (60°C)
- Temperature is below -40°F (-40°C)
- Pressure is above 13 PSIG
- Pressure is below 1 PSIG
- The difference between the temperature and the dew point is less than or equal to 3°C.

Alert Message

- HIGH TEMPERATURE
- LOW TEMPERATURE
- HIGH PRESSURE
- LOW PRESSURE
- DEW POINT (HIGH HUMIDITY)

The alert message will be repeatedly displayed until the system controller acknowledges the alert condition by selecting ACK ALERT in the main menu. Once acknowledged, the alert message changes to the programmed acknowledge action (ACK ACTION). If the alert condition remains active after a period of time, the alert message reappears on the monitor, restarting the alert message cycle. This cycle will continue to repeat until the alert condition is resolved.

REPEAT

- This setting programs how often an alert message is repeatedly displayed until the system controller acknowledges the alert condition. The following are the settings:
- CONSTANT The alert message is continuously displayed on the monitor until acknowledged.
 - 15 MIN The alert message is displayed every 15 minutes for a 15-second duration until acknowledged.
 - 30 MIN The alert message is displayed every 30 minutes for a 15-second duration until acknowledged.
 - 60 MIN The alert message is displayed every 60 minutes for a 15-second duration until acknowledged.
 - OFF The alert message is disabled and will not be displayed on the monitor.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



ALERT

REPEAT
ACK ACTION
ACTIVATE AUX
<CURRENT READING>
RESET ALERT

BACK
EXIT



CURRENT READING

TEMPERATURE
DEWPOINT
PRESSURE
REFRESH

BACK
EXIT

ACK ACTION

Acknowledge action programs the alert label behavior after the alert condition has been acknowledged. The following settings are available for acknowledge:

- ALWAYS ON

The alert label is displayed until alert conditions are cleared.
- OFF 8 HRS

The alert label is turned off for 8 hours. Label returns after 8 hours if the alert condition persists.
- OFF 24 HRS

The alert label is turned off for 24 hours. Label returns after 24 hours if the alert condition persists.
- OFF 48 HRS

The alert label is turned off for 48 hours. Label returns after 48 hours if the alert condition persists.

ACTIVATE AUX

This setting activates an auxiliary when an alert condition exists. Settings include the following:

- NONE (default)

Not activated.
- 1

An alert condition will close AUX 1.
- 2

An alert condition will close AUX 2.

CURRENT READING

The Current Reading menu displays the existing status of temperature, pressure, and dew point inside the dome system. An arrow displayed to the left of a menu item denotes that an alert condition exists.

An up arrow indicates the reading is over the threshold. A down arrow indicates the reading is below the threshold.

The high temperature alert occurs if the temperature is above 140°F (60°C).

The low temperature alert occurs if the temperature is below -40°F (-40°C).

The high pressure alert occurs if the pressure is above 13 PSIG.

The low pressure alert occurs if the pressure is below 1 PSIG.

The dew point (high humidity) alert occurs if the difference between the temperature and the dew point is less than or equal to 3°C.

NOTE: The normal operating temperature inside the unit will be greater than the temperature outside the back box due to the heat emitted by the system's electronics.

RESET ALERT

Reset alert clears the alert condition and removes the alert label from the monitor. The system automatically checks internal conditions 60 seconds after reset. If conditions are still unacceptable, the alert label reappears on the screen indicating further corrective action is required.

CLEAR

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CLEAR

CLEAR ALL ZONES

CLEAR ALL PRESETS

CLEAR ALL PATTERNS

CLEAR ALL WINDOW BLANKING

CLEAR ALL EVENTS

RESTORE FACTORY DEFAULTS

BACK

EXIT


Use this setting to clear user-defined settings or return the dome to factory default settings.

The following are the available settings:

- ALL ZONES
- Clears all zones. To clear a single zone, refer to the *Zones* section.
- ALL PRESETS
- Clears all presets. To clear a single preset, refer to the *Presets* section.
- ALL PATTERNS
- Clears all patterns. To clear a single pattern, refer to the *Patterns* section.
- ALL WINDOW BLANKING
- Clears all blanked windows. To clear a single blanked window, refer to the *Window Blanking* section.
- CLEAR ALL EVENTS
- Clears all events. To clear a single event, refer to the *Event* section.
- RESTORE FACTORY DEFAULTS
- Restores all camera settings to factory default settings.

* This setting applies only to Pressurized Spectra IV dome systems.

PASSWORD

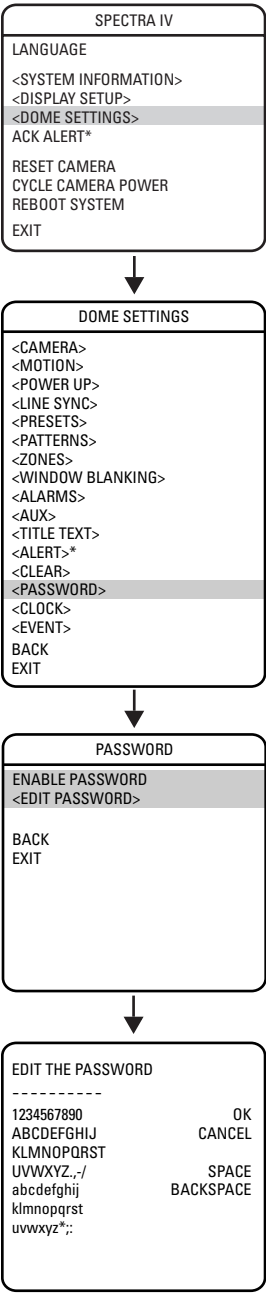

Spectra IV and Spectra IV SE feature password protection to prevent unauthorized changes to the dome settings. An operator can open the System Information and Display Setup screens, but cannot access any of the dome settings menus.

Controller/keyboard commands cannot override password-protected settings. If a keyboard is used to set a preset, pattern, or zone, the Enter Password screen appears on the monitor. The password must be entered before programming can continue.

At least one character must be entered to create a valid password.

* This setting applies only to Pressurized Spectra IV dome systems.

CLOCK

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



CLOCK

TIME BASE

TIME FORMAT

SET TIME

DATE FORMAT

SET DATE

DAYLIGHT SAVINGS

BACK

EXIT

The clock is used to program the current date and time. The date and time set in the Clock menu is used to program events. The date and time can also be displayed on the monitor when the menus are not being accessed.

To program the clock, do the following:

1. Use the joystick to position the cursor beside TIME BASE. Press Iris Open. The following are the settings for time base:

POWER LINE This is the most accurate time base and is the preferred selection in areas with a stable power line frequency.

INTERNAL CLOCK The internal clock should be used in areas where the power line frequency is not accurate.

- a. Move the joystick up or down to view the selections.
 - b. Press Iris Open to select INTERNAL CLOCK or POWER LINE.
2. Use the joystick to position the cursor beside TIME FORMAT. Press Iris Open. Move the joystick up or down to view the selections. Select 12 HOUR or 24 HOUR, and then press Iris Open to confirm the time format.

3. Use the joystick to position the cursor beside SET TIME. Press Iris Open. Scroll through the hours until the desired time appears. Use the joystick to move the cursor to the right. Scroll through the minutes until the desired time appears. Press Iris Open to select the time.

4. Use the joystick to position the cursor beside DATE FORMAT. Press Iris Open. Move the joystick up or down to select MM/DD/YYYY or DD/MM/YYYY. Press Iris Open to confirm the date format.

5. Use the joystick to position the cursor beside SET DATE. Press Iris Open. Scroll through the days, months, and years until the desired number appears. Press Iris Open to select the date.

6. Use the joystick to position the cursor beside DAYLIGHT SAVINGS. Press Iris Open. The following are the settings for daylight savings:

OFF Daylight saving time will be turned off.

FIXED DATE Daylight saving time occurs on the same date each year.

RELATIVE DATE Daylight saving time occurs on a different date each year, such as the first Sunday in April.

* This setting applies only to Pressurized Spectra IV dome systems.

7. If FIXED DATE was selected, the following appears on the monitor:

| CLOCK | |
|------------------|----------------|
| TIME BASE | INTERNAL CLOCK |
| TIME FORMAT | 12 HOUR |
| SET TIME | 00:00 AM |
| DATE FORMAT | MM/DD/YYYY |
| SET DATE | 00/00/0000 |
| DAYLIGHT SAVINGS | FIXED DATE |
| TIME SHIFT | 1 HOUR |
| START DATE | |
| MONTH | APRIL |
| DAY | 1 |
| START TIME | 02:00 AM |
| END DATE | |
| MONTH | OCTOBER |
| DAY | 1 |
| END TIME | 02:00 AM |
| BACK | |
| EXIT | |

- Use the joystick to position the cursor beside TIME SHIFT. Press Iris Open. Scroll through the options until the desired selection appears. Press Iris Open to select the time shift.
- Use the joystick to position the cursor beside the start date MONTH. Press Iris Open. Scroll through the options until the desired month appears. Press Iris Open to select the month.
- Use the joystick to position the cursor beside the start date DAY. Press Iris Open. Scroll through the options until the desired date appears. Press Iris Open to select the day.
- Use the joystick to position the cursor beside START TIME. Press Iris Open. Scroll through the hours until the desired time appears. Use the joystick to move the cursor to the right. Scroll through the minutes until the desired time appears. Press Iris Open to select the start time.
- Repeat steps b-d for the ending date and time.

8. If RELATIVE DATE was selected, the following appears on the monitor:

| CLOCK | |
|------------------|----------------|
| TIME BASE | INTERNAL CLOCK |
| TIME FORMAT | 12 HOUR |
| SET TIME | 00:00 AM |
| DATE FORMAT | MM/DD/YYYY |
| SET DATE | 00/00/0000 |
| DAYLIGHT SAVINGS | RELATIVE DATE |
| TIME SHIFT | 1 HOUR |
| START DATE | |
| MONTH | APRIL |
| WEEK | 1ST |
| DAY | SUNDAY |
| START TIME | 02:00 AM |
| END DATE | |
| MONTH | OCTOBER |
| WEEK | LAST |
| DAY | SUNDAY |
| END TIME | 02:00 AM |
| BACK | |
| EXIT | |

Follow the instructions in step 7 for FIXED DATE, adding WEEK.

EVENT

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOMES SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



EVENT

EVENT TYPE

EVENT LABEL

<EDIT EVENT LABEL>

<EDIT EVENT>

<CLEAR EVENT>

<LIST EVENT>

HOLIDAY

<EDIT HOLIDAY>

<CLEAR HOLIDAY>

<LIST HOLIDAYS>

BACK

EXIT

REFERENCE INFORMATION

An event is a preprogrammed camera, park, scan, preset, pattern, window blanking, alarm, or auxiliary function that can be performed automatically at a specific date and time.

For example, suppose a camera is set to run in a continuous pattern that scans a parking lot during business hours Monday through Friday. On Saturday and Sunday the camera needs to stop running the pattern and observe a gate. First, program a preset to set the camera to observe the gate. Second, schedule an event to activate the preset on the weekends. Finally, a second, separate event must be scheduled to end the first event and allow the camera to return to the pattern on Monday.

NOTE: Events do not have a selectable duration. A second event must be scheduled to end a previous event.

Events can be programmed from the Preset, Pattern, Window Blanking, Alarm, or Aux menus, or they can be programmed from the Event menu. Events are managed individually or as a group from the Event menu.

EVENT TYPE

Any of the available event types can be selected from this menu, or you may select ALL EVENTS to manage the events as a group.

NOTE: The event type cannot be changed if you are accessing it through the Edit Schedule option from the Preset, Pattern, Window Blanking, Alarm, or Aux menu.

EVENT LABEL

Set the event label to NEW to create a new event.

Use the following steps to manage an existing event.

1. Use the joystick to position the cursor beside EVENT LABEL. Press Iris Open.
2. Move the joystick up or down to scroll through the events. Press Iris Open to enter selection.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOMES SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



EVENT

EVENT TYPE
EVENT LABEL
<EDIT EVENT LABEL>
<EDIT EVENT>
<CLEAR EVENT>
<LIST EVENT>

HOLIDAY
<EDIT HOLIDAY>
<CLEAR HOLIDAY>
<LIST HOLIDAYS>

BACK
EXIT

REFERENCE INFORMATION

EDIT EVENT LABEL

Use the following steps to edit the event label.

1. Use the joystick to position the cursor beside EDIT EVENT LABEL.
2. Press Iris Open. The following appears on the monitor:

EDIT EVENT LABEL

EVENT 1
1234567890
ABCDEFGHIJ
KLMNOPQRST
UVWXY,-./
abcdefghijklmnopqrstuvwxyz
BACKSPACE
OK
CANCEL

3. Use the joystick to position the cursor beside a character. Press Iris Open to enter selection. To clear a character, position the cursor beside BACKSPACE, and then press Iris Open.
4. When label is completed, move the cursor to OK. Press Iris Open to return to the Edit Schedule menu.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



EVENT

EVENT TYPE
EVENT LABEL
<EDIT EVENT LABEL>
<EDIT EVENT>
<CLEAR EVENT>
<LIST EVENT>
HOLIDAY
<EDIT HOLIDAY>
<CLEAR HOLIDAY>
<LIST HOLIDAYS>
BACK
EXIT
REFERENCE INFORMATION

EDIT EVENT

Use the following steps to edit an event.

- 1. Use the joystick to position the cursor beside EDIT EVENT.
- 2. Press Iris Open. The following appears on the monitor:

EDIT EVENT

| | |
|--------------|---------------|
| EVENT LABEL | EVENT 1 |
| EVENT ACTIVE | NO |
| EVENT TIME | 12:00 AM |
| EVENT OCCURS | |
| SUNDAY | OFF |
| MONDAY | OFF |
| TUESDAY | OFF |
| WEDNESDAY | OFF |
| THURSDAY | OFF |
| FRIDAY | OFF |
| SATURDAY | OFF |
| HOLIDAY | SKIP HOLIDAYS |
| EVENT TYPE | PRESET |
| NUMBER | 1 |
| BACK | |
| EXIT | |

- a. Use the joystick to position the cursor beside EVENT ACTIVE. Press Iris Open. Scroll to select NO to leave the event inactive or YES to activate the event. Press Iris Open to confirm your selection.
- b. Use the joystick to position the cursor beside EVENT TIME. Press Iris Open. Scroll through the hours until the desired time appears. Use the joystick to move the cursor to the right. Scroll through the minutes until the desired time appears. Press Iris Open to select the time.
- c. Use the joystick to position the cursor beside SUNDAY. Press Iris Open. The available options are OFF and ON. Press Iris Open to confirm your selection.
- d. Follow the instructions in the previous step for the remaining days of the week.
- e. Use the joystick to position the cursor beside HOLIDAY. Press Iris Open. The following are the holiday settings:

| | |
|---------------|---|
| SKIP HOLIDAYS | Event will not occur on a day of the week that it is set for if that date is in the list of holidays. |
| ON | Event will activate on holidays that have been set in the Event menu, in addition to its normally scheduled days of the week. |
| OFF | The event only occurs on the days of the week that it is scheduled; holidays have no effect on the event. |

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE

<SYSTEM INFORMATION>

<DISPLAY SETUP>

<DOME SETTINGS>

ACK ALERT*

RESET CAMERA

CYCLE CAMERA POWER

REBOOT SYSTEM

EXIT



DOME SETTINGS

<CAMERA>

<MOTION>

<POWER UP>

<LINE SYNC>

<PRESETS>

<PATTERNS>

<ZONES>

<WINDOW BLANKING>

<ALARMS>

<AUX>

<TITLE TEXT>

<ALERT>*

<CLEAR>

<PASSWORD>

<CLOCK>

<EVENT>

BACK

EXIT



EVENT

EVENT TYPE

EVENT LABEL

<EDIT EVENT LABEL>

<EDIT EVENT>

<CLEAR EVENT>

<LIST EVENT>

HOLIDAY

<EDIT HOLIDAY>

<CLEAR HOLIDAY>

<LIST HOLIDAYS>

BACK

EXIT

REFERENCE INFORMATION

CLEAR EVENT

To clear an event:

1. Use the joystick to position the cursor beside CLEAR EVENT.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

LIST EVENT

To list events:

1. Use the joystick to position the cursor beside LIST EVENT.
2. Press Iris Open.
3. All programmed events will be listed.

HOLIDAY

Use the following steps to create a new holiday.

1. Use the joystick to position the cursor beside HOLIDAY. Press Iris Open.
2. Move the joystick up or down to scroll through the options. If no holidays have been created in the past, NEW is the only selectable option. Press Iris Open to select NEW.
3. Proceed to the *Edit Holiday* section.

Use the following steps to manage an existing holiday.

1. Use the joystick to position the cursor beside HOLIDAY. Press Iris Open.
2. Move the joystick up or down to scroll through the holidays. Press Iris Open to enter selection.
3. Proceed to the *Edit Holiday* section.

NOTE: Holidays cannot be changed through the Edit Schedule option from the Preset, Pattern, Window Blanking, Alarm, or Aux menus.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



EVENT

EVENT TYPE
EVENT LABEL

<EDIT EVENT LABEL>
<EDIT EVENT>
<CLEAR EVENT>
<LIST EVENT>

HOLIDAY
<EDIT HOLIDAY>
<CLEAR HOLIDAY>
<LIST HOLIDAYS>

BACK
EXIT

REFERENCE INFORMATION

EDIT HOLIDAY

Use the following steps to edit a holiday:

- 1. Use the joystick to position the cursor beside EDIT EVENT LABEL.
- 2. Press Iris Open.
- 3. Use the joystick to position the cursor beside OCCURRENCE. Press Iris Open. The following are the settings for Occurrence:

FIXED DATE Holiday occurs on the same date each year.
RELATIVE DATE Holiday occurs on a different date each year, such as the third Sunday in April.

- 4. If FIXED DATE was selected as the occurrence, the following appears on the monitor:

EDIT HOLIDAY

OCCURRENCE FIXED DATE
MONTH JANUARY
DAY 1

BACK
EXIT

- a. Use the joystick to position the cursor beside MONTH. Press Iris Open. Scroll through the options until the desired month appears. Press Iris Open to select the month.
 - b. Use the joystick to position the cursor beside DAY. Press Iris Open. Scroll through the options until the desired date appears. Press Iris Open to select the day.
- 5. If RELATIVE DATE was selected as the occurrence, the following appears on the monitor:
 - a. Use the joystick to position the cursor beside MONTH. Press Iris Open. Scroll through the options until the desired month appears. Press Iris Open to select the month.
 - b. Use the joystick to position the cursor beside WEEK. Press Iris Open. Scroll through the options until the desired week appears. Press Iris Open to select the week.
 - c. Use the joystick to position the cursor beside DAY. Press Iris Open. Scroll through the options until the desired day of the week appears. Press Iris Open to select the day.

* This setting applies only to Pressurized Spectra IV dome systems.

SPECTRA IV

LANGUAGE
<SYSTEM INFORMATION>
<DISPLAY SETUP>
<DOME SETTINGS>
ACK ALERT*
RESET CAMERA
CYCLE CAMERA POWER
REBOOT SYSTEM
EXIT



DOME SETTINGS

<CAMERA>
<MOTION>
<POWER UP>
<LINE SYNC>
<PRESETS>
<PATTERNS>
<ZONES>
<WINDOW BLANKING>
<ALARMS>
<AUX>
<TITLE TEXT>
<ALERT>*
<CLEAR>
<PASSWORD>
<CLOCK>
<EVENT>
BACK
EXIT



EVENT

EVENT TYPE
EVENT LABEL

<EDIT EVENT LABEL>
<EDIT EVENT>
<CLEAR EVENT>
<LIST EVENT>

HOLIDAY
<EDIT HOLIDAY>
<CLEAR HOLIDAY>
<LIST HOLIDAYS>

BACK
EXIT

REFERENCE INFORMATION

CLEAR HOLIDAY

To clear a holiday:

1. Use the joystick to position the cursor beside CLEAR HOLIDAY.
2. Press Iris Open.
3. Follow the directions displayed on the monitor.

LIST HOLIDAYS

To list events:

1. Use the joystick to position the cursor beside LIST HOLIDAYS.
2. Press Iris Open.
3. All programmed holidays will be listed.

* This setting applies only to Pressurized Spectra IV dome systems.

SCHEDULED EVENTS

Use this page to record scheduled events.

[illegible]

Reset, Cycle Power, Reboot

| | |
|----------------------|---------|
| SPECTRA IV | |
| LANGUAGE | ENGLISH |
| <SYSTEM INFORMATION> | |
| <DISPLAY SETUP> | |
| <DOME SETTINGS> | |
| ACK ALERT* | |
| RESET CAMERA | |
| CYCLE CAMERA POWER | |
| REBOOT SYSTEM | |
| EXIT | |

RESET CAMERA

Use this function to reset all camera settings to factory default parameters.

CYCLE CAMERA POWER

If the camera is not operating or if you lose camera control, cycle camera power. Cycling camera power resets the camera but does not change any saved camera settings.

REBOOT SYSTEM

Reboot the system if it is not operating or if there is no control. Rebooting the system will cycle dome and camera power without changing programmed dome settings.

Software/Language File Upload

The RJ-45 data port of the dome drive allows access for on-site setup, testing, and uploading of revised operating software and language files. A Pelco field service tool is required to perform these operations. Field service tools include Pelco's remote monitor kit (IPS-RMK), remote data port box (IPS-RDPE-2), and remote monitor cable (IPS-CABLE).

For instructions on how to upload revised operating software and language files refer to the Installation/Operation manual supplied with the field service tool.

NOTE: Only perform software uploads when necessary. Software uploads do not need to be performed if the dome system is operating properly.

During a software/language file upload, a progress bar will appear on the monitor to indicate data is being transferred to the Spectra dome system. The default setting for data transmission is 115.2 KB per second. Noisy and long-run connections will slow the transmission rate.

Suggested Preventative Maintenance

The Spectra IV and Spectra IV SE dome systems do not require any special maintenance.

Occasionally, dust may build up on the inside or the outside of the dome. If this occurs, turn power to the unit off and remove the lower dome from the back box. Remove the dust from the lower dome using compressed air from a spray can. Replace the lower dome following the installation instructions that were shipped with it.



WARNING: Proper eye protection should be worn when using compressed air cans.

Specifications

16X MODELS

DD4TC16

| | |
|-------------------------------|--|
| Signal Format | NTSC |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch interline transfer CCD |
| Effective Pixels | 768 (H) X 494 (V) |
| Horizontal Resolution | >470 TV lines |
| Lens | F1.4 (f=4–64 mm optical, 16X optical zoom, 8X digital zoom) |
| Zoom Speed (optical range) | 1.9/3.6/6.0 seconds |
| Horizontal Angle of View | 43° at 4 mm wide zoom; 3° at 64 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.05 lux at 1/2 sec. shutter speed (color) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| Shutter Speed | Automatic (electronic iris)/manual 1/2 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic with manual override |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |

DD4TC16-X

| | |
|-------------------------------|--|
| Signal Format | PAL |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch interline transfer CCD |
| Effective Pixels | 752 (H) X 582 (V) |
| Horizontal Resolution | >460 TV lines |
| Lens | F1.4 (f=4–64 mm optical, 16X optical zoom, 8X digital zoom) |
| Zoom Speed (optical range) | 1.9/3.6/6.0 seconds |
| Horizontal Angle of View | 43° at 4 mm wide zoom; 3° at 64 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.05 lux at 1/1.5 sec. shutter speed (color) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| Shutter Speed | Automatic (electronic iris)/manual 1/1.5 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic with manual override |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |

22X MODELS (MONOCHROME)

DD4M22

| | |
|-------------------------------|--|
| Signal Format | NTSC |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 494 (V) |
| Horizontal Resolution | >500 TV lines |
| Lens | F1.6 (f=4–88 mm optical, 22X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 2.4/3.9/6.3 seconds |
| Horizontal Angle of View | 47° at 4 mm wide zoom; 2.2° at 88 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.005 lux at 1/2 sec. shutter speed |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| Shutter Speed | Automatic (electronic iris)/manual 1/2 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic with manual override |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >46 dB |

DD4M22-X

| | |
|-------------------------------|--|
| Signal Format | PAL |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 582 (V) |
| Horizontal Resolution | >500 TV lines |
| Lens | F1.6 (f=4–88 mm optical, 22X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 2.4/3.9/6.3 seconds |
| Horizontal Angle of View | 47° at 4 mm wide zoom; 2.2° at 88 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.005 lux at 1/1.5 sec. shutter speed |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| Shutter Speed | Automatic (electronic iris)/manual 1/1.5 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic with manual override |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >46 dB |

22X MODELS (COLOR)

DD4C22

| | |
|-------------------------------|--|
| Signal Format | NTSC |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 494 (V) |
| Horizontal Resolution | >470 TV lines |
| Lens | F1.6 (f=4~88 mm optical, 22X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 2.4/3.9/6.3 seconds |
| Horizontal Angle of View | 47° at 4 mm wide zoom; 2.2° at 88 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.02 lux at 1/2 sec. shutter speed |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/2 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |

DD4C22-X

| | |
|-------------------------------|--|
| Signal Format | PAL |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 582 (V) |
| Horizontal Resolution | >460 TV lines |
| Lens | F1.6 (f=4~88 mm optical, 22X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 2.4/3.9/6.3 seconds |
| Horizontal Angle of View | 47° at 4 mm wide zoom; 2.2° at 88 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.02 lux at 1/1.5 sec. shutter speed |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/1.5 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |

23X MODELS

DD4CBW23

| | |
|-------------------------------|---|
| Signal Format | NTSC |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 494 (V) |
| Horizontal Resolution | >470 TV lines |
| Lens | F1.6 (f=3.6–82.8 mm optical, 23X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 2.9/4.2/5.8 seconds |
| Horizontal Angle of View | 54° at 3.6 mm wide zoom; 2.5° at 82.8 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.08 lux at 1/2 sec. shutter speed (color) 0.3 lux at 1/60 sec. shutter speed (B-W) 0.013 lux at 1/2 sec. shutter speed (B-W) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/2 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |
| Wide Dynamic Range | 80X |

DD4CBW23-X

| | |
|-------------------------------|---|
| Signal Format | PAL |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 582 (V) |
| Horizontal Resolution | >470 TV lines |
| Lens | F1.6 (f=3.6~82.8 mm optical, 23X optical zoom, 12X digital zoom) |
| Zoom Speed | 2.9/4.2/5.8 seconds |
| Horizontal Angle of View | 54° at 3.6 mm wide zoom; 2.5° at 82.8 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.08 lux at 1/1.5 sec. shutter speed (color) 0.3 lux at 1/50 sec. shutter speed (B-W) 0.013 lux at 1/1.5 sec. shutter speed (B-W) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/1.5 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >50 dB |
| Wide Dynamic Range | 80X |


35X MODELS

DD4CBW35

| | |
|-------------------------------|---|
| Signal Format | NTSC |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 768 (H) X 494 (V) |
| Horizontal Resolution | >540 TV lines |
| Lens | F1.4 (f=3.4~119 mm optical, 35X optical zoom, 12X digital zoom) |
| Zoom Speed (optical range) | 3.2/4.6/6.6 seconds |
| Horizontal Angle of View | 55.8° at 4.2 mm wide zoom; 1.72° at 147 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.55 lux at 1/60 sec. shutter speed (color) 0.063 lux at 1/4 sec. shutter speed (color) 0.00018 lux at 1/2 sec. shutter speed (B-W) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/2 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >46-50 dB |
| Wide Dynamic Range | 128X |

DD4CBW35-X

| | |
|-------------------------------|---|
| Signal Format | PAL |
| Scanning System | 2:1 Interlace |
| Image Sensor | 1/4-inch CCD |
| Effective Pixels | 724 (H) X 582 (V) |
| Horizontal Resolution | >540 TV lines |
| Lens | F1.4 (f=3.4~119 mm optical, 35X optical zoom, 12X digital zoom) |
| Zoom Speed | 3.2/4.6/6.6 seconds |
| Horizontal Angle of View | 55.8° at 4.2 mm wide zoom; 1.72° at 147 mm telephoto zoom |
| Focus | Automatic with manual override |
| Maximum Sensitivity at 35 IRE | 0.50 lux at 1/50 sec. shutter speed (color) 0.062 lux at 1/3 sec. shutter speed (color) 0.00014 lux at 1/1.5 sec. shutter speed (B-W) |
| Sync System | Internal/AC line lock, phase adjustable via remote control, V-Sync |
| White Balance | Automatic with manual override |
| Shutter Speed | Automatic (electronic iris)/manual 1/1.5 ~ 1/30,000 |
| Iris Control | Automatic iris control with manual override |
| Gain Control | Automatic/off |
| Video Output | 1 Vp-p, 75 ohms |
| Video Signal to Noise | >46-50 dB |
| Wide Dynamic Range | 128X |

 **Green** The materials used in the manufacture of this document and its components are compliant to the requirements of Directive 2002/95/EC



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

PRODUCT WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on FR/FT/FS Series fiber optic products and TW3000 Series unshielded twisted pair transmission products.
- Three years on Spectra® IV products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on Camclosure® and fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- Three years on PMCL200/300/400 Series LCD monitors.
- Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra III™, Esprit®, ExSite™, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit and WW5700 Series window wiper (excluding wiper blades).
- Two years (except lamp and color wheel) on Digital Light Processing (DLP®) displays. The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
- Eighteen months on DX Series digital video recorders, NVR300 Series network video recorders, and Endura™ Series distributed network-based video products.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.

If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico, send goods to:

Service Department
Pelco
3500 Pelco Way
Clovis, CA 93612-5699

If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico and are instructed to return goods to the USA, you may do one of the following:

If the goods are to be sent by a COURIER SERVICE, send the goods to:

Pelco
3500 Pelco Way
Clovis, CA 93612-5699 USA

If the goods are to be sent by a FREIGHT FORWARDER, send the goods to:

Pelco c/o Expeditors
473 Eccles Avenue
South San Francisco, CA 94080 USA
Phone: 650-737-1700
Fax: 650-737-0933

REVISION HISTORY

| Manual # | Date | Comments |
|----------|------|-------------------|
| C3412M | 9/06 | Original version. |



Worldwide Headquarters
3500 Pelco Way
Clovis, California 93612 USA

USA & Canada
Tel: 800/289-9100
Fax: 800/289-9150

International
Tel: 1-559/292-1981
Fax: 1-559/348-1120

www.pelco.com

ISO9001